

Reservoir Tank

POWER ASSISTED SYSTEM (POWER STEERING)

8. Reservoir Tank

A: REMOVAL

- 1) Drain fluid from the reservoir tank.
- 2) Disconnect the hose from reservoir tank.


CAUTION:

To prevent foreign matter from entering the hose and pipe, cover the open ends of them with clean cloth.

- 3) Remove the bolt and remove the reservoir tank from the body.

CAUTION:

Do not separate the reserve tank and bracket.

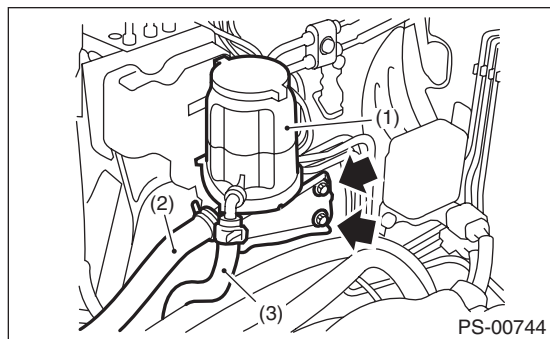

- (1) Reservoir tank
- (2) Suction hose
- (3) Return hose

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Replenish power steering fluid up to the specified level. <Ref. to PS-51, Power Steering Fluid.>

Tightening torque:

33 N·m (3.4 kgf-m, 24.3 ft-lb)

C: INSPECTION

Check the reservoir tank for cracks, breakage or damage. If a failure is found, replace the reservoir tank.