

## 2. Wheel Alignment

### A: INSPECTION

NOTE:

Measure and adjust the front and rear wheel alignment at a time. Refer to the section "FS" for measurement and adjustment of wheel alignment.  
<Ref. to FS-6, INSPECTION, Wheel Alignment.>