

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

12.General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	• Improper tire pressure adjustment. • Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	• Air pressure sensor malfunction • Air pressure sensor is out of battery. • Defective TPMS & keyless entry control module • Defective combination meter • Defective vehicle harness
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	• Air pressure sensor is faulty. • Defective TPMS & keyless entry control module • Defective combination meter

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	17
3. Front Differential Assembly	18
4. Rear Differential (VA-type)	19
5. Rear Differential Front Oil Seal	37
6. Rear Differential Side Oil Seal	39
7. Rear Differential Front Member	40
8. Rear Differential Mount Bushing	41
9. General Diagnostic Table	42