


Rear ABS Wheel Speed Sensor

VEHICLE DYNAMICS CONTROL (VDC)


8. Rear ABS Wheel Speed Sensor

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from the rear ABS wheel speed sensor.

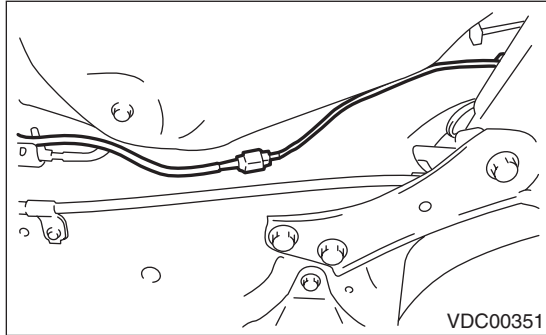


- 3) Remove the sensor harness from the rear arm clip.

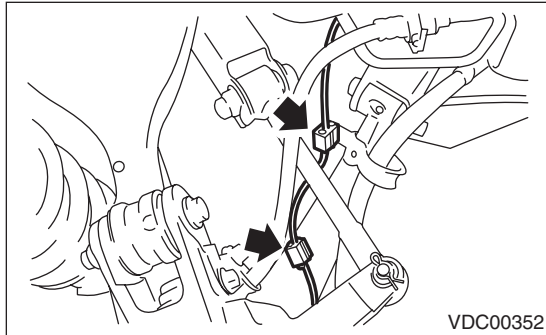

- 4) Remove the rear ABS wheel speed sensor from the rear housing.

CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

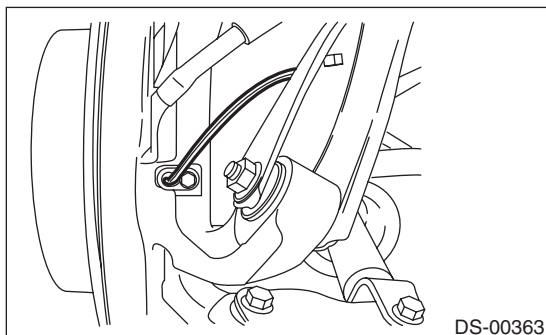

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to damage the sensor.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. (W3 (White))

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

<Ref. to VDC-21, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>