


5. Spare Tire Hoist

A: REMOVAL

- 1) Remove the spare tire from the vehicle.
- 2) Lift up the vehicle.
- 3) Remove the spare tire guide.

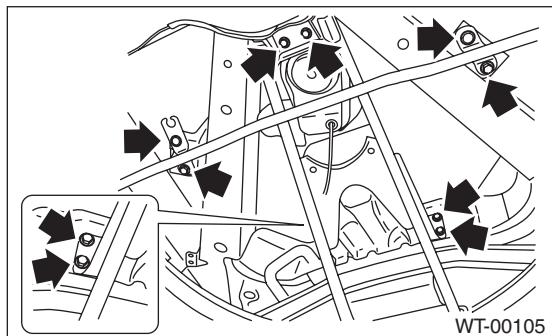

B: INSTALLATION


Install each part in the reverse order of removal.

Tightening torque:

33 N·m (3.7 kgf-m, 24.3 ft-lb)

C: DISASSEMBLY

Remove the spare tire hoist.

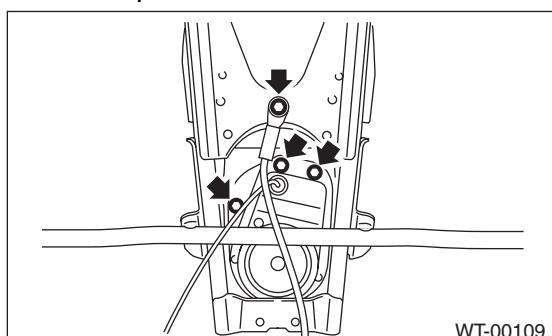

D: ASSEMBLY

Assemble each part in the reverse order of disassembly.

Tightening torque:

33 N·m (3.7 kgf-m, 24.3 ft-lb)