

12.Drain Valve

A: REMOVAL


Drain valve is integrated with canister. Refer to "Canister" for removal procedures. <Ref. to EC(H6DO)-6, REMOVAL, Canister.>

B: INSTALLATION

Refer to "Canister" for installation procedures. <Ref. to EC(H6DO)-6, INSTALLATION, Canister.>

C: INSPECTION

Check the resistance between drain valve terminals.

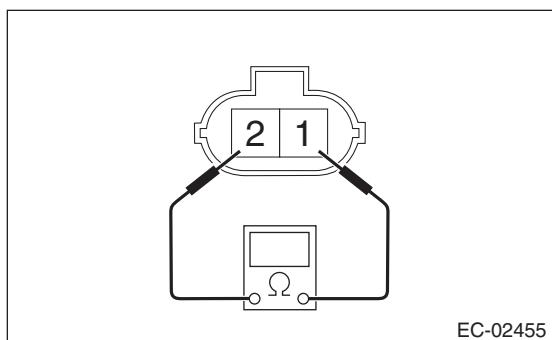

Terminal No.	Standard
1 and 2	25 — 30 Ω (when 20°C (68°F))