

## 7. Fuel Level Sensor

### A: REMOVAL

For removal procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-68, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION

For installation procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-68, INSTALLATION, Fuel Level Sensor.>

### C: INSPECTION

For inspection procedures, refer to the “FU(H6DO)” section. <Ref. to FU(H6DO)-68, INSPECTION, Fuel Level Sensor.>