


3. Rear Exhaust Pipe

A: REMOVAL

CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Lift up the vehicle.
- 2) Remove the rear exhaust pipe from the front exhaust pipe assembly.

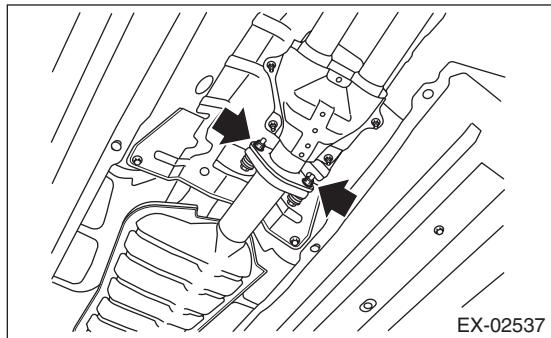


EX-02537

- 3) Remove the rear exhaust pipe from the muffler.

CAUTION:


Be careful not to drop the rear exhaust pipe.

- LH side

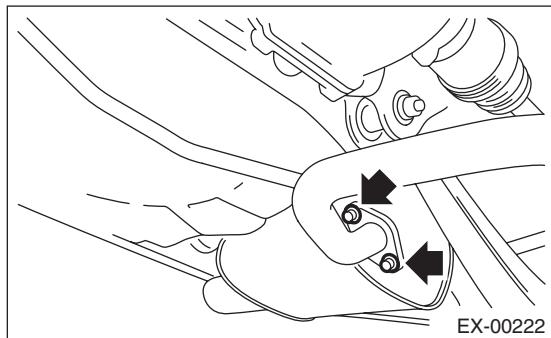

EX-00222

- RH side

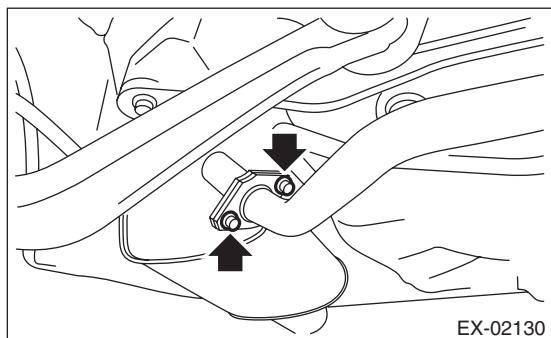


EX-02130

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 5) Remove the rear exhaust pipe from the cushion rubber.

CAUTION:

Be careful not to let the muffler contact the rear bumper.

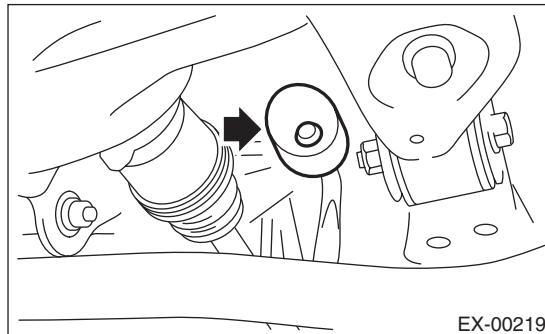

EX-00219

- 6) Remove the rear exhaust pipe.


B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 2) Install the rear exhaust pipe to cushion rubber.

NOTE:

After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

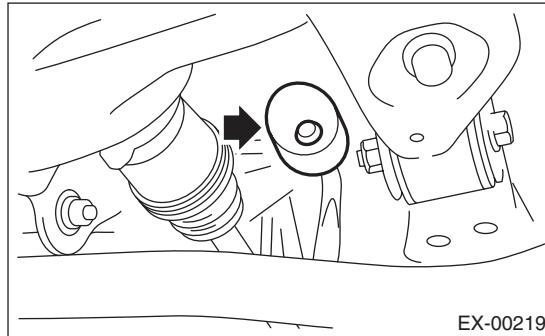

EX-00219

- 3) Install the rear exhaust pipe to the muffler.


NOTE:

Use a new gasket and self-locking nut.

Tightening torque:

$48 \text{ N}\cdot\text{m} (4.9 \text{ kgf-m}, 35.4 \text{ ft-lb})$

- LH side

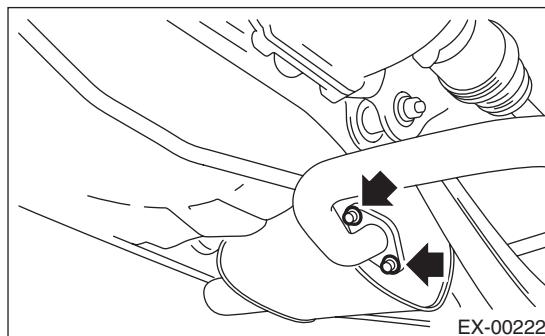


EX-00222

Rear Exhaust Pipe

EXHAUST

- RH side

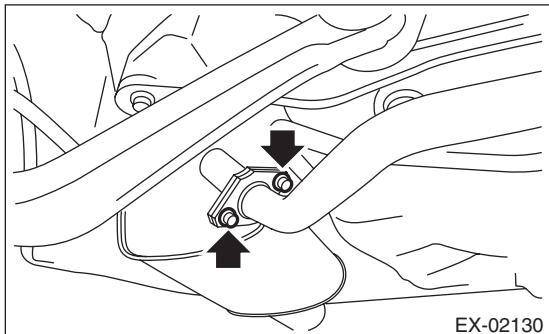


- 4) Install the rear exhaust pipe to the front exhaust pipe assembly.

NOTE:

Use a new gasket.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

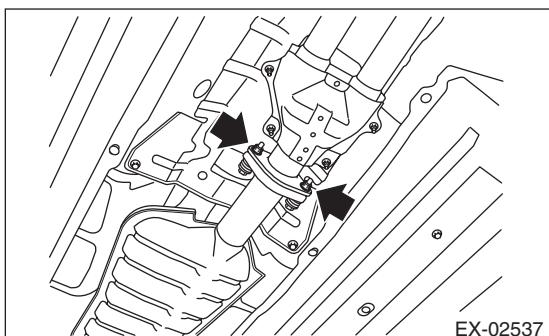

- 5) Lower the vehicle.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.