

## 22. Intake and Exhaust Valve

### A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of intake and exhaust valves. <Ref. to ME(H6DO)-83, REMOVAL, Cylinder Head.>  
<Ref. to ME(H6DO)-84, INSTALLATION, Cylinder Head.>