


18. Transmission Control Module (TCM)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Lower Cover.>
- 3) Disconnect the connector from TCM.

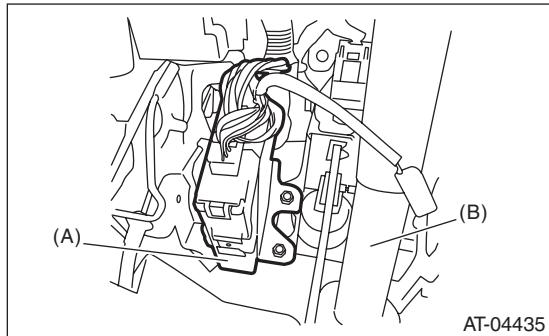

(A) Transmission control module (TCM)
 (B) Steering column

- 4) Remove the TCM.

NOTE:

Replace the TCM and bracket as a set.

B: INSTALLATION

- 1) Install the TCM to the bracket.


CAUTION:

To avoid the damage to bracket and TCM, do not remove after installing TCM to bracket. If installed by mistake, the part must be replaced with a new part.

- 2) Install the TCM.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

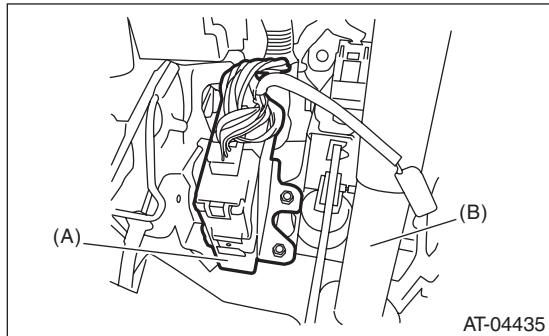

(A) Transmission control module (TCM)
 (B) Steering column

- 3) Connect the connector to TCM.
- 4) Install in the reverse order of removal.

5) Perform Clear Memories 2 operation. <Ref. to 5AT(diag)-18, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>

6) Perform learning control promotion. <Ref. to 5AT(diag)-22, GENERAL DESCRIPTION, Learning Control.>

7) Perform the inspection at the end of repair work, and make sure there is no problem with the shift shock.