

## 2. Airbag Connector

### A: PROCEDURE


#### 1. BUCKLE SWITCH

##### 1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow.
- (2) While holding the slide lock (A) in moved position, disconnect the connector.

**CAUTION:**

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

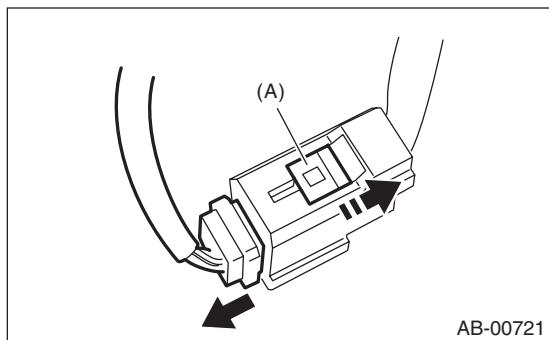


##### 2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

**CAUTION:**


**Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.**

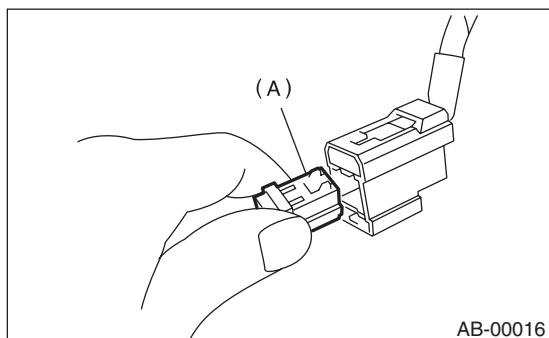


#### 2. DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE AND PRETENSIONER

##### 1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

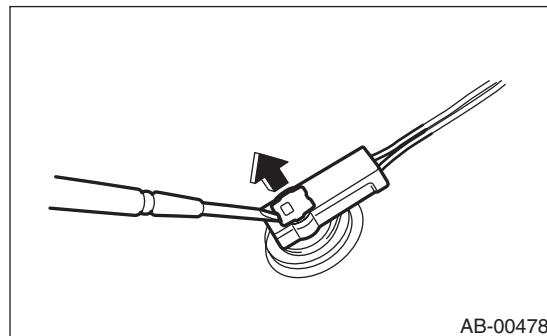

- (2) Pull and disconnect the connector from the driver's airbag module assembly or retractor assembly.

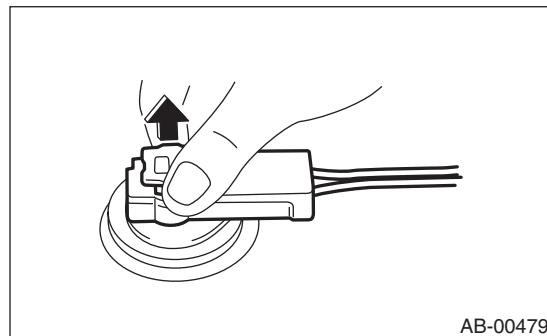


##### 2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert the push lock until a clicking sound is heard.

**CAUTION:**

- **Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**
- **Be sure to push the push lock in securely.**

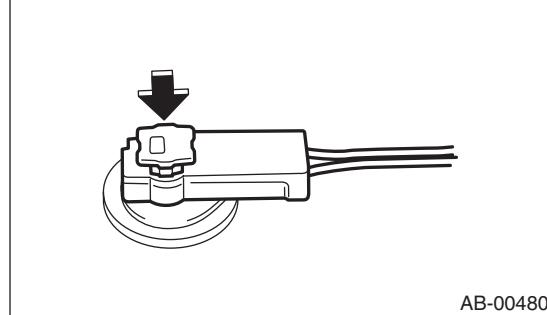


**NOTE:**

The connector can not be connected when the push lock is in the lock position. To connect the connector, set the push lock to unlock position.

### 3. DRIVER'S AIRBAG (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR) AND PASSENGER'S AIRBAG

#### 1) How to disconnect:


- (1) Push the slide lock (A) into the direction of arrow.

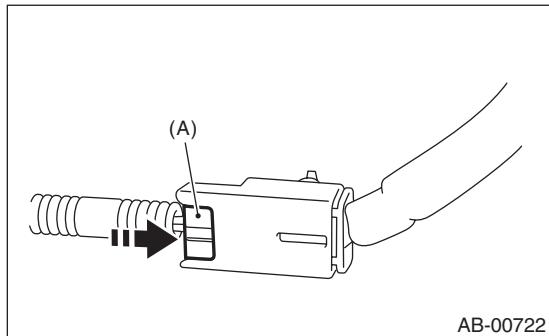

- (2) With the slide lock pushed, disconnect the connector.

#### CAUTION:

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

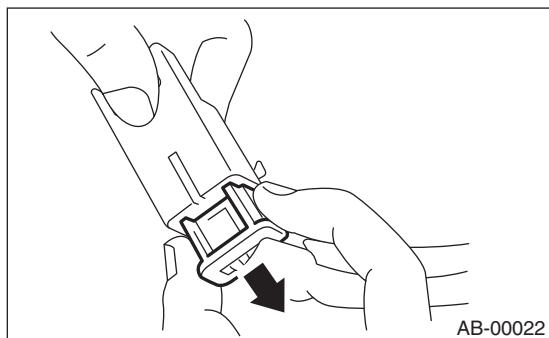


#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

#### CAUTION:


**Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.**

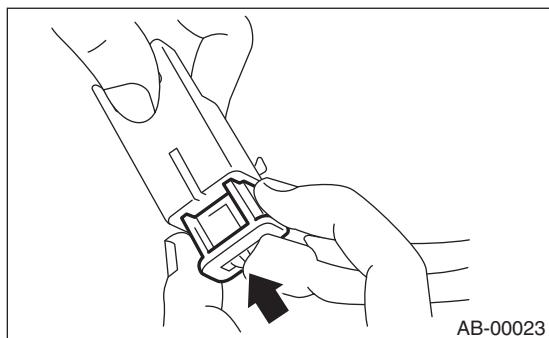

### 4. SIDE AIRBAG

#### 1) How to disconnect:


- (1) Push the lock arm (A).
- (2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of arrow.

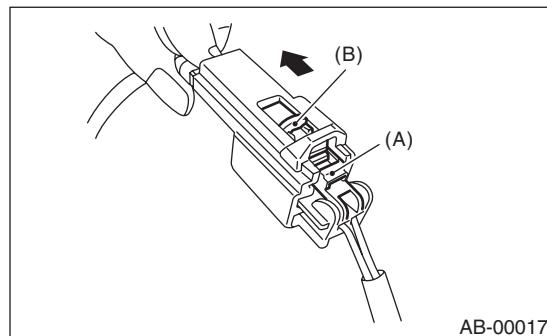

- (3) While holding the slide lock in that position, release the lock arm (back to the original position), and disconnect the connector.

#### CAUTION:

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

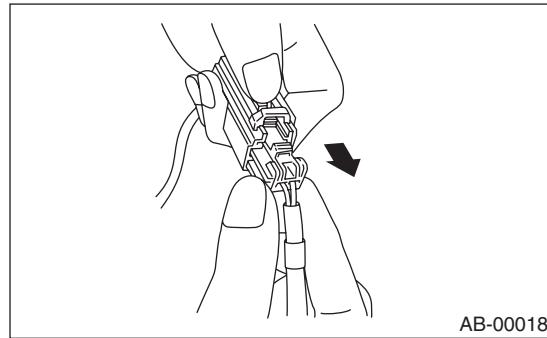


#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

#### CAUTION:

**Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**

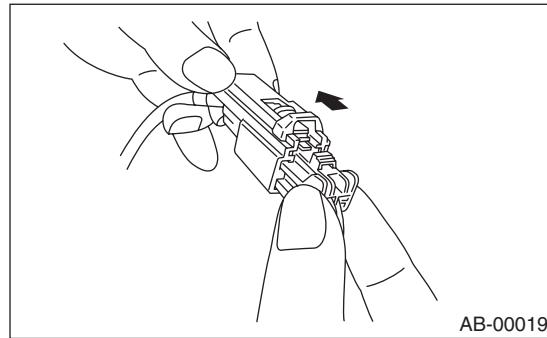

# Airbag Connector

## AIRBAG SYSTEM


### 5. FRONT SUB SENSOR, SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR SAT-ELLITE SAFING SENSOR, AND SEAT POSITION SENSOR

#### 1) How to disconnect:

Holding outer part (A), pull it in the direction of arrow.

#### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

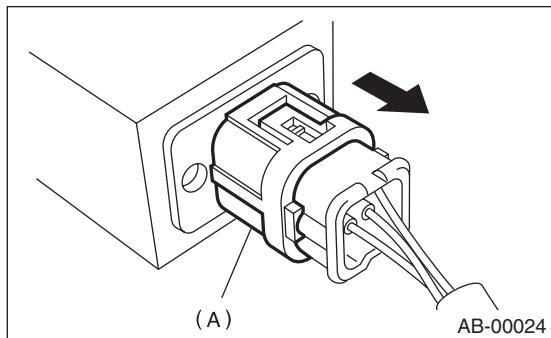


#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

#### CAUTION:

- Outer side (A) move back, and so do not put your hand on the outer part.
- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

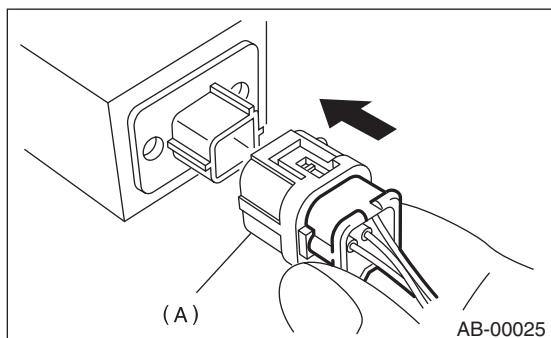


### 6. OCCUPANT DETECTION SYSTEM (BETWEEN AIRBAG REAR HARNESS AND SEAT HARNESS) AND BELT TENSION SENSOR

#### 1) How to disconnect:

Push lock arm (A), then disconnect the connector.

#### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

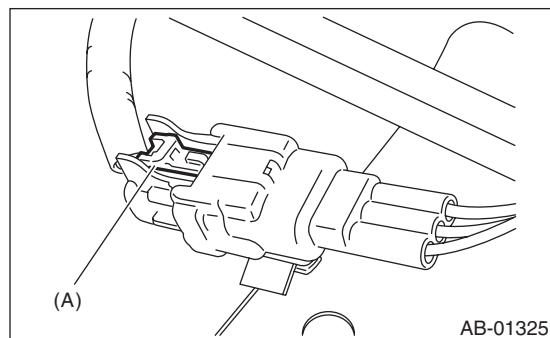

#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.


#### CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

### 7. AIRBAG CONTROL MODULE

#### 1) How to disconnect:

Press the lock lever plate (A) and pull out the lock lever.

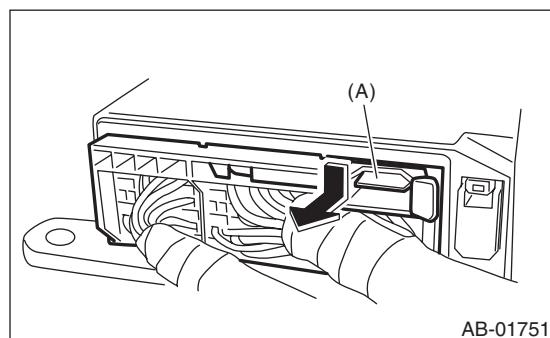

#### 2) How to connect:

Insert the connector and push the lock lever in securely.

#### CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.