


## 10.Center Speaker

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ring indicator (A) and console front panel (B).

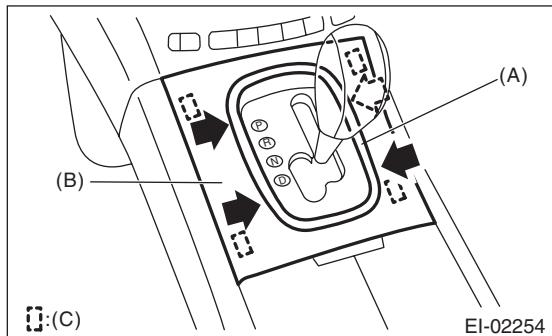


(C) Clip


#### NOTE:

The ring indicator can be easily removed by inserting the clip remover or equivalent into the positions indicated by arrows.

- 3) Remove the instrument ornament on passenger's seat and inner panels on driver's seat.

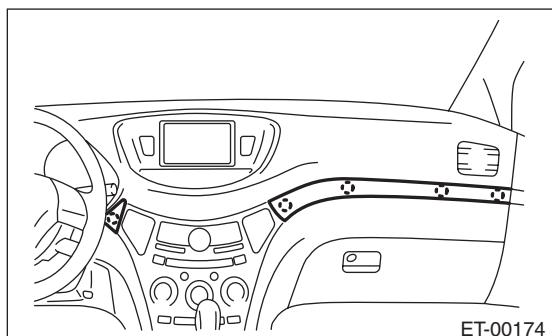


- 4) Remove the screws, and pull out the front control panel.

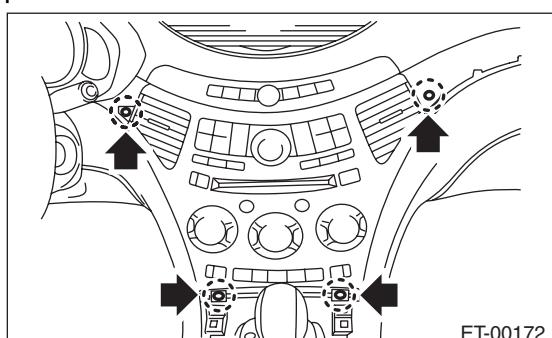

- 5) Disconnect the harness connectors and remove the front control panel.

- 6) Disconnect the air vent upper grille and disconnect the hazard switch connector.

- 7) Remove the screws and disconnect the harness connector.

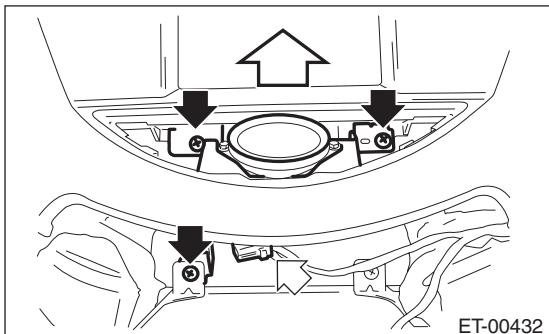

- 8) Remove the center speaker.

### B: INSTALLATION

Install in the reverse order of removal.