


## 23. Rearview Camera

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim and disconnect the rear view camera connector.
- 3) Press the pawls (black arrow side), remove the rear view camera.

NOTE:

Pawl indicated by white arrow is fixed. Press the ones indicated by black arrows.

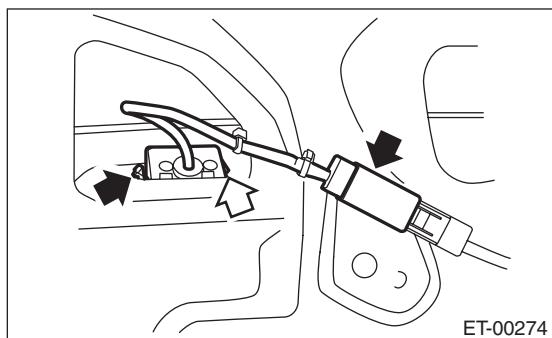

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the maker position of the rear view camera after installation. <Ref. to ET-6, ADJUSTMENT, Rearview Camera System.>