


### 11. Roof Molding

#### A: REMOVAL


1) Turn over the edge of the roof molding, and remove the inside clips with flat tip screwdriver by sliding as arrow indicates.

Right side: slide towards the front of the vehicle.

Left side: slide towards the rear of the vehicle.

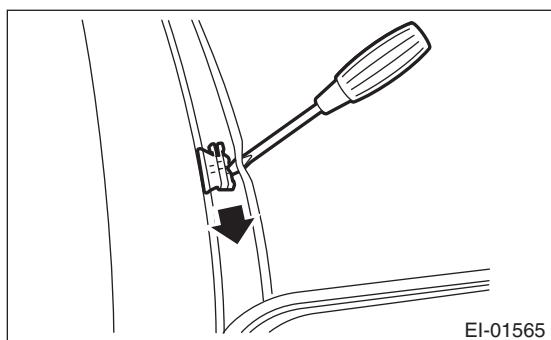

EI-01565

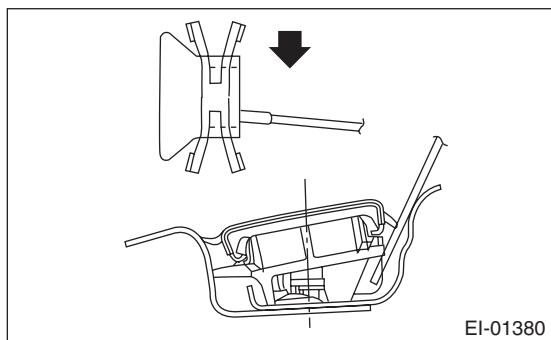


EI-01380

2) Pull the roof molding upward, and remove it from vehicle body.

3) Remove the roof trim. <Ref. to EI-51, Roof Trim.>

4) Remove the nuts, and remove the roof carrier attachment.

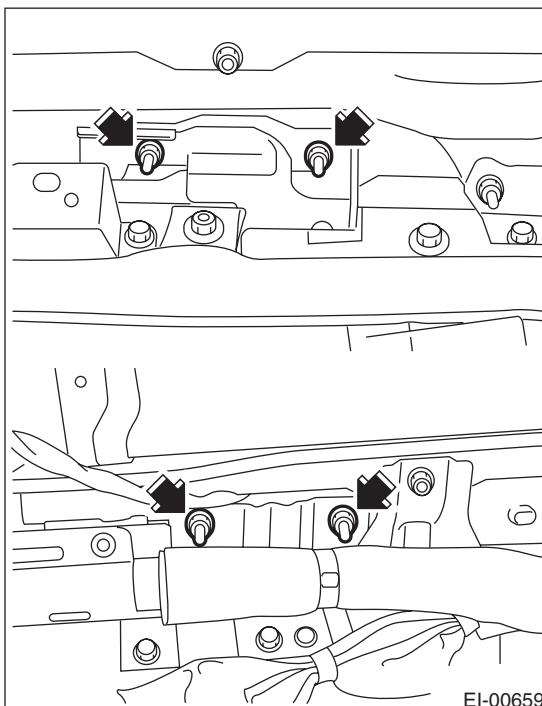

EI-00659

#### B: INSTALLATION

1) Install the roof carrier attachment.

##### **Tightening torque:**


**10 N·m (1.0 kgf·m, 7.23 ft-lb)**

2) Remove each clip from the roof molding, and install them to the vehicle side.

##### **CAUTION:**

**Always replace clips that were damaged during removal of the roof molding.**

3) Push the front end of the roof molding against the front window, and attach the forward positioning clip onto the rivet on the body.

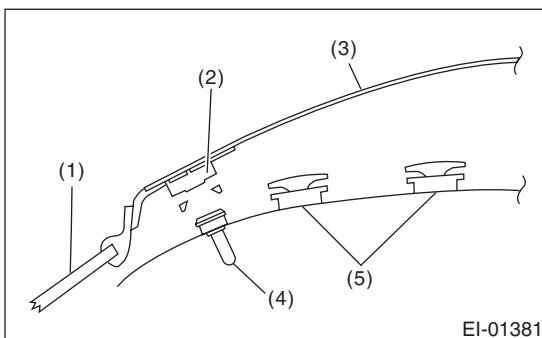

EI-01381

- (1) Windshield
- (2) Positioning clip
- (3) Roof molding
- (4) Rivet
- (5) Clip