


27.Trailer Hitch


A: REMOVAL

- 1) Remove the spare tire hoist. <Ref. to WT-11, REMOVAL, Spare Tire Hoist.>
- 2) Remove the bolt, and then detach the main frame.

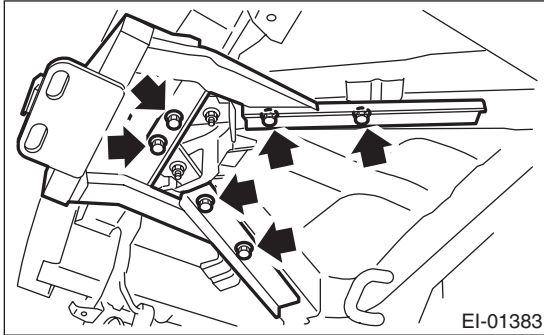

CAUTION:
The trailer hitch main frame is heavy. Be careful when removing.

- 3) Remove the bolts, and then remove the center frame.

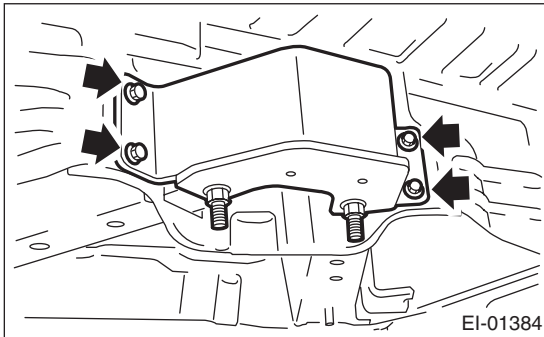

- 4) Remove the side frame from the vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “**COMPONENT**” of “**General Description**”.

<Ref. to EI-17, TRAILER HITCH, COMPONENT, General Description.>

EXTERIOR BODY PANELS

EB

	Page
1. General Description	2
2. Front Hood	12
3. Front Fender	15
4. Front Door	16
5. Front Sealing Cover	18
6. Rear Door	19
7. Rear Sealing Cover	21
8. Rear Gate	22