


8. Cowl Panel


A: REMOVAL

- 1) Remove the wiper arm. <Ref. to WW-17, REMOVAL, Front Wiper Arm.>
- 2) Remove the weather strip clips, and remove the weather strip.

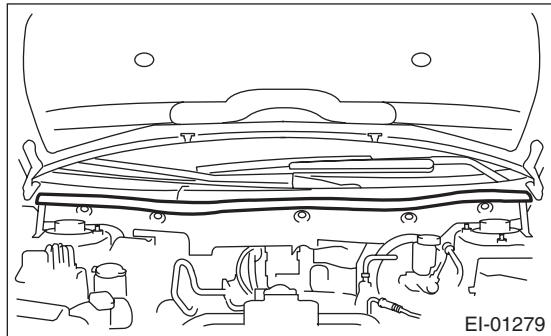


NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use a clip remover to remove.

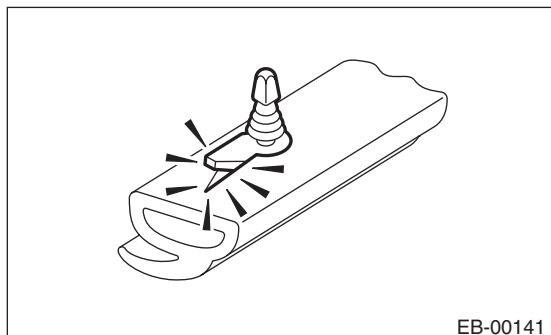


- 3) Remove the clip (A) and remove the cowl panel side.

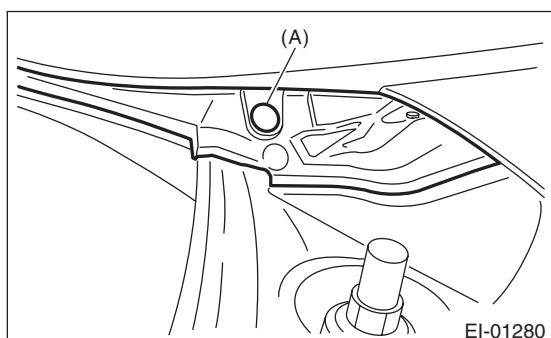

- 4) Pull and remove the cowl panel RH.

CAUTION:

Before removing the cowl panel, use a air blower and nylon brush to sweep gravel from the lower area of the front side of the glass.

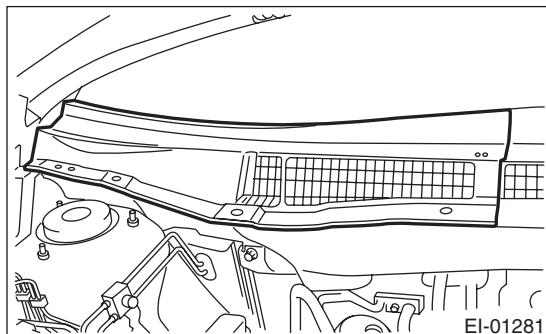

- 5) Remove the cowl panel LH.

B: INSTALLATION

CAUTION:

Before installing the windshield glass and cowl panel, make sure there are no gravel in the installing area.

Install in the reverse order of removal.

NOTE:

Hook the craw of cowl panel to the windshield.

