

## 2. Power Window System

### A: WIRING DIAGRAM

<Ref. to WI-141, Power Window System.>

### B: INSPECTION

Symptom	Repair order
All power windows do not operate.	1. Fuse (SBF-4) 2. Power window circuit breaker 3. Power window relay 4. Wiring harness 5. Body integrated unit
Particular window does not operate.	1. Power window main switch 2. Power window sub-switch 3. Power window motor 4. Wiring harness
"Window Lock" does not operate.	Power window main switch

### C: NOTE

For the removal of power window system component parts, refer to the corresponding section for each component.

- Power window control switch <Ref. to GW-8, Power Window Control Switch.>
- Front door glass <Ref. to GW-10, Front Door Glass.>
- Front regulator and motor assembly <Ref. to GW-11, Front Regulator and Motor Assembly.>
- Rear door glass <Ref. to GW-17, Rear Door Glass.>
- Rear regulator and motor assembly <Ref. to GW-18, Rear Regulator and Motor Assembly.>