


# Relay and Fuse


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 19. Relay and Fuse

### A: LOCATION

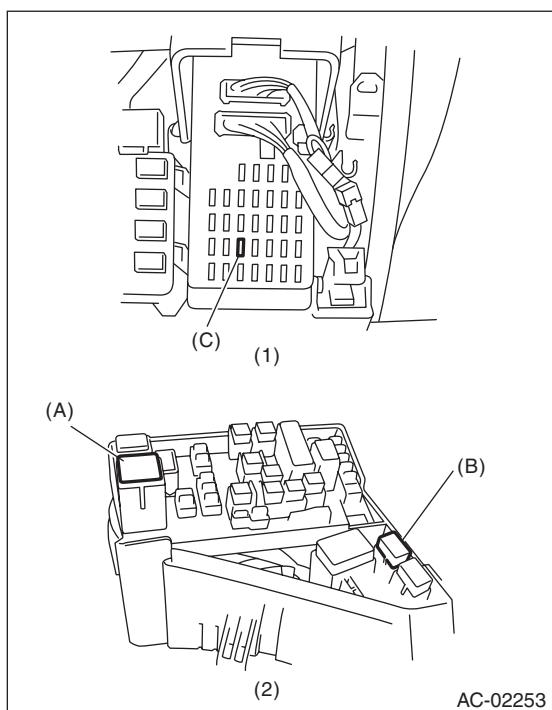

- (1) Joint box
- (2) Main fuse box

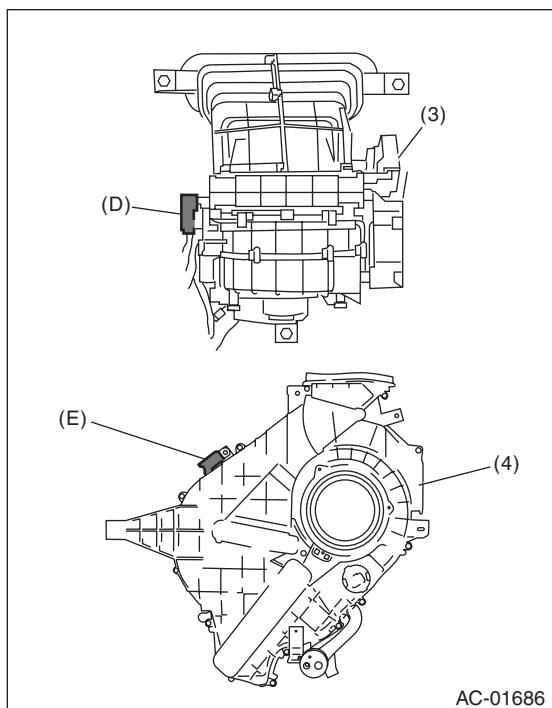


- (3) Blower motor unit
- (4) Rear cooler unit

Main fan relay 1	(A)
A/C relay	(B)
A/C fuse	(C)
Front blower relay	(D)
Rear blower relay	(E)

### B: INSPECTION

- A/C relay

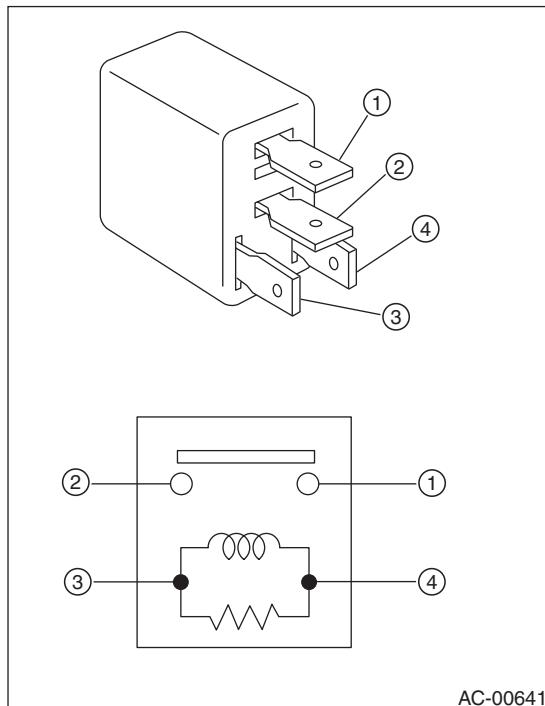


- (3) — (4): Continuity exists
- (1) — (2): Continuity does not exist

## Relay and Fuse

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


- Main fan relay 1, Front blower relay

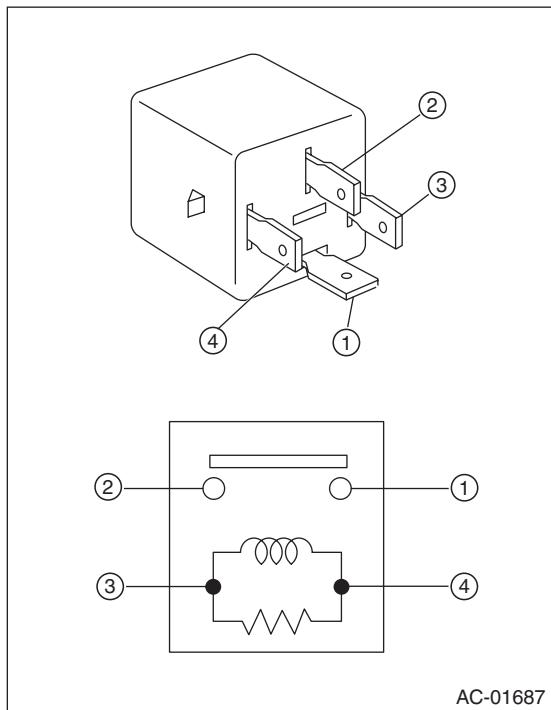

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new part.

- Rear blower relay

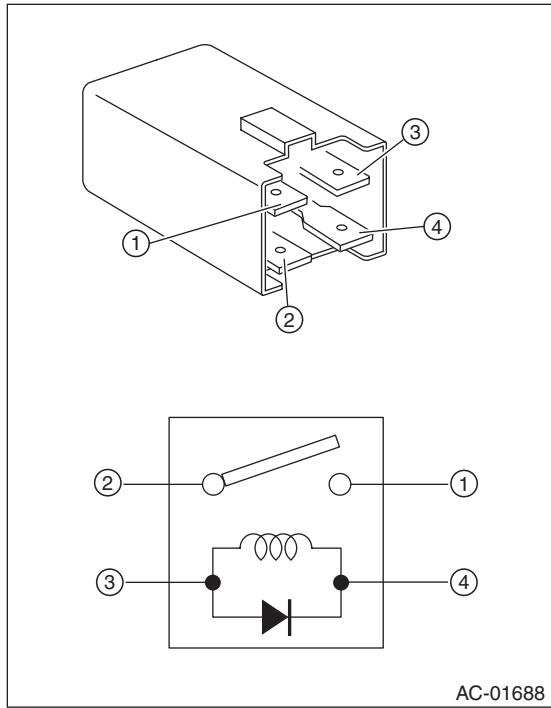

(3) — (4): Continuity exists

(1) — (2): Continuity does not exist