

Air Vent Grille


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

25. Air Vent Grille


A: REMOVAL

1. UPPER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Lift the upper grille (speaker grille for harman/kardon audio spec), and remove the catch on the hazard switch side.

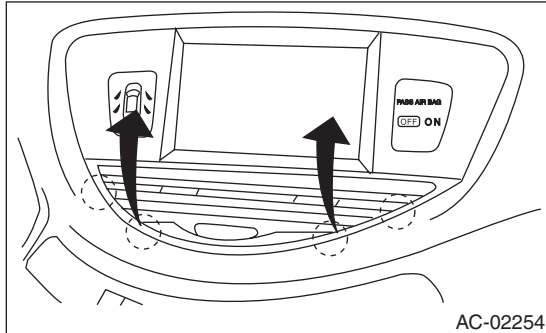


- 3) Hold the side of the monitor and remove the catch on the upper, right and left sides.

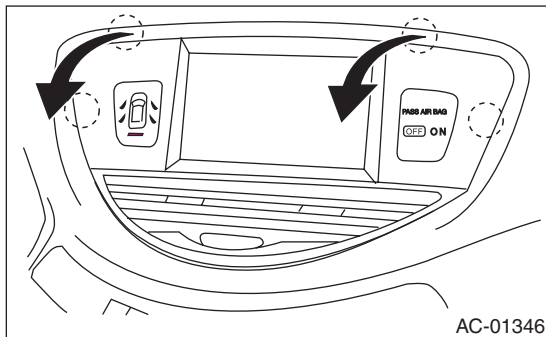

- 4) Detach the connectors and remove the panel.


2. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the front control panel. <Ref. to AC-31, FRONT, REMOVAL, Control Panel.>
- 3) Remove the screw, and remove the center grille.

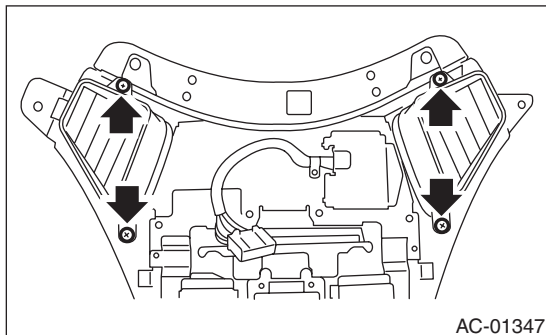


3. SIDE GRILLE

Remove the catch in 2 locations to remove the side air vent grille.

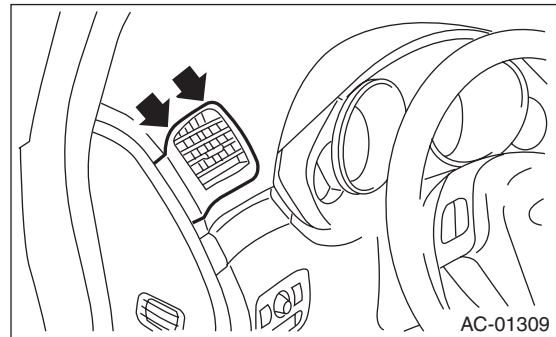

4. ROOF GRILLE

Remove the catch, and remove the roof air vent grille.

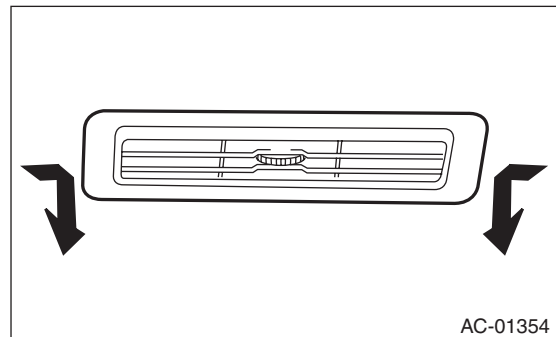

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly.
- 2) Check that the adjustment can be maintained in each position.