


17. Front Fog Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disengage the three clips, and then turn over the lower mud guard.
- 3) Disconnect the harness connector.
- 4) Remove the two mounting bolts, and pull and detach the fog light assembly.

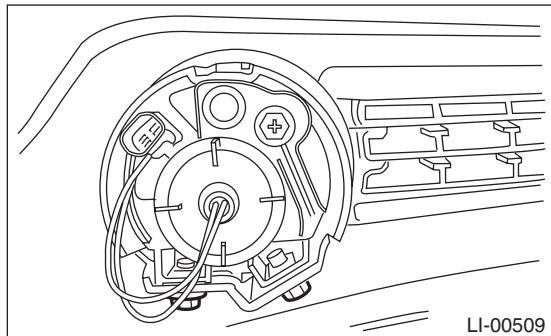

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: ADJUSTMENT

Fog light aiming

NOTE:

Before checking the fog light beam level, be sure of the following:


- Check the area around the fog light for any scratches, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

- 1) Bounce the vehicle several times to normalize the suspension.
- 2) Make certain that someone is seated in the driver's seat.
- 3) Measure the height of the fog light center.
- 4) Disengage the three clips, and then turn over the mud guard.


Front Fog Light Assembly

LIGHTING SYSTEM

5) Adjust the front fog light pattern by inserting a Philips screwdriver to the adjusting hole.

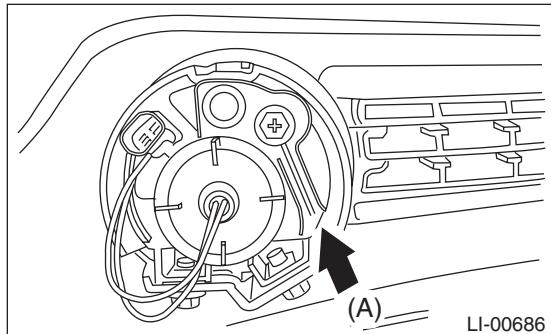

(A) Adjusting hole

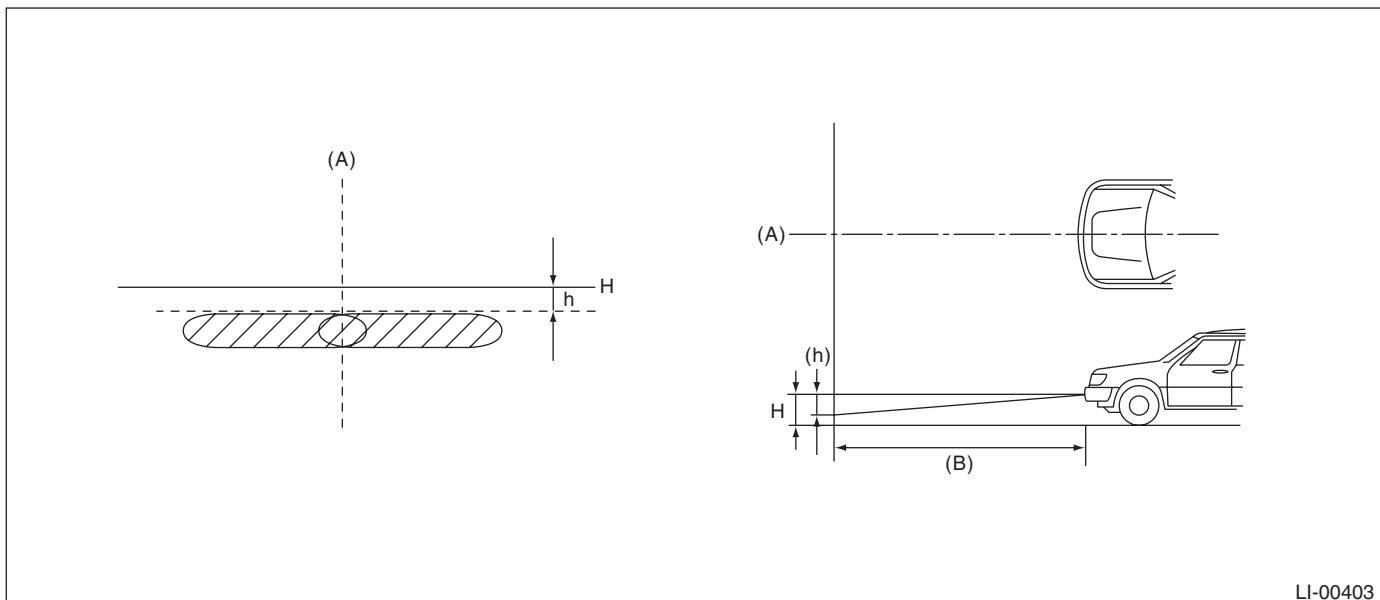

(A) Vehicle center

(B) 3 m (10 ft)

(H) Height of the center of fog light (mm)

h Dimension mm (in)	40 (1.57)
---------------------	-----------