



### 35. Ignition Switch Illumination

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws, and detach the upper column cover and lower column cover.

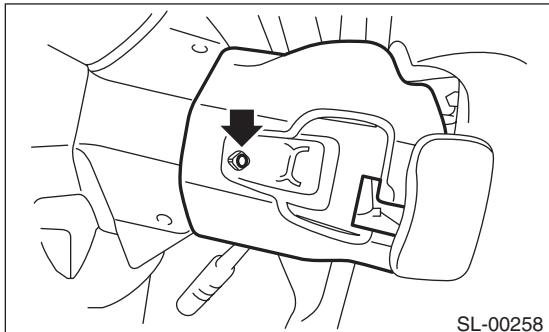

- 3) Disconnect the ignition switch illumination connector (A).
- 4) Turn the ignition switch illumination connector to the left and disconnect it.

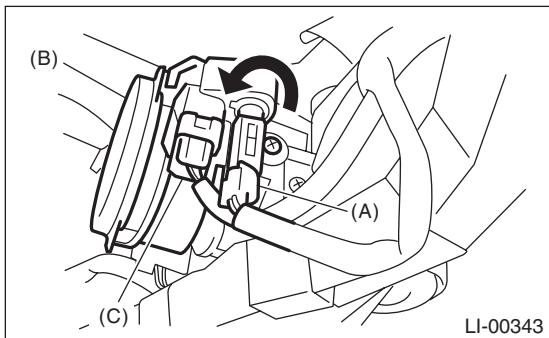

- (A) Ignition switch illumination connector
- (B) Ignition switch illumination
- (C) Immobilizer antenna connector

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Step	Check	Yes	No
<b>1 CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal.	Go to step 2.
<b>2 CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-21, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>