


## 38.Door Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screw, and pull out the door switch.

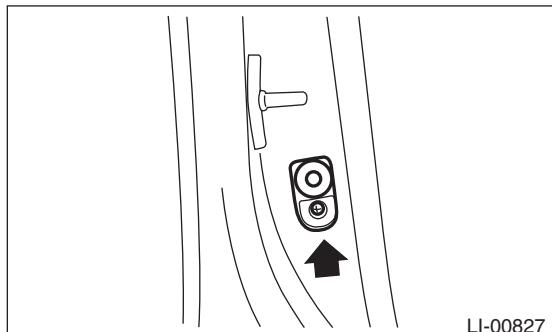

- 3) Disconnect the harness connector.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Refer to the door switch check under the room light system. <Ref. to LI-10, DOOR SWITCH, INSPECTION, Room Light System.>