


4. Third Seat

A: REMOVAL


1) Remove the seat belt cover.

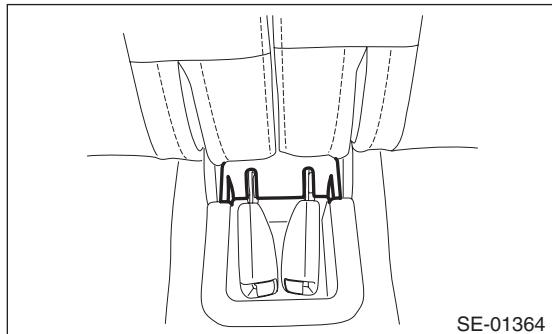

2) Lift up the front side of the 3rd seat cushion and then remove the hooks.

3) Lift up the 3rd seat cushion and remove the seat cushion by pushing it backward to detach the hook.

4) Remove the eight bolts securing the 3rd seat backrest.

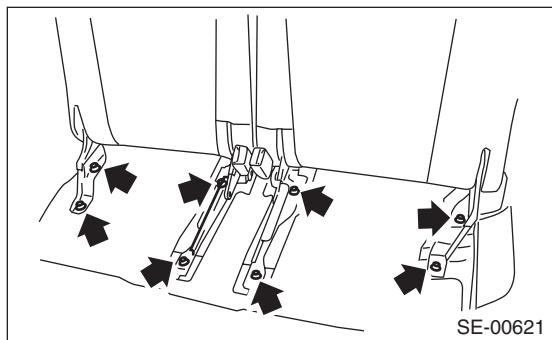

5) Remove the 3rd seat.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-2, COMPONENT, General Description.>


C: DISASSEMBLY

1) Remove the 3rd seat. <Ref. to SE-22, REMOVAL, Third Seat.>


2) Remove the clips, then remove the seat belt tray.

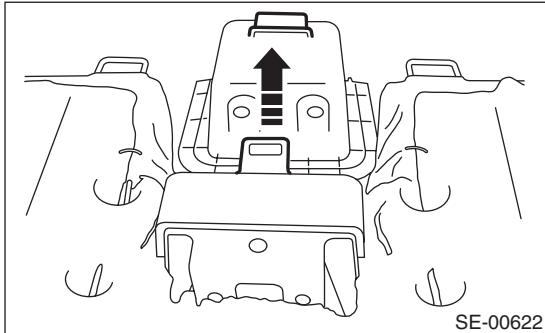


3) Remove the hog rings (A) on the rear side of seat cushion.

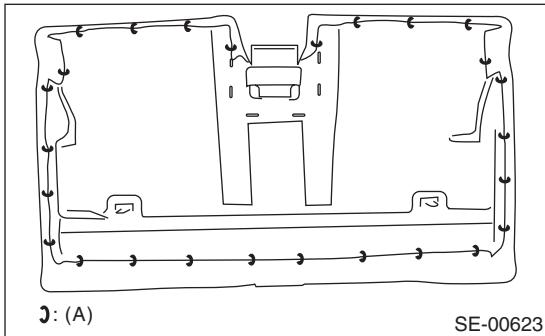

4) Remove the hog rings (A) on the front side of seat cushion.

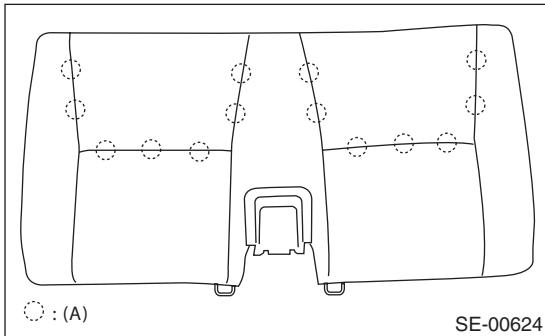


5) Remove the two screws securing the hinge lever assembly.

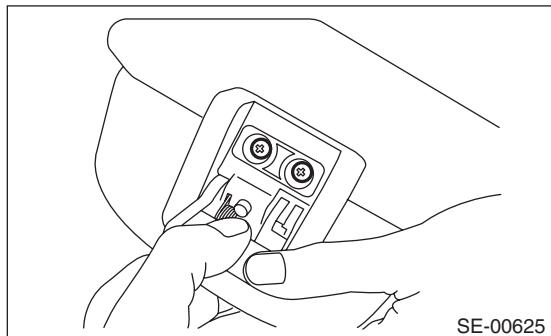

SE-00625


6) Disconnect the wire connected to the hinge lever assembly.

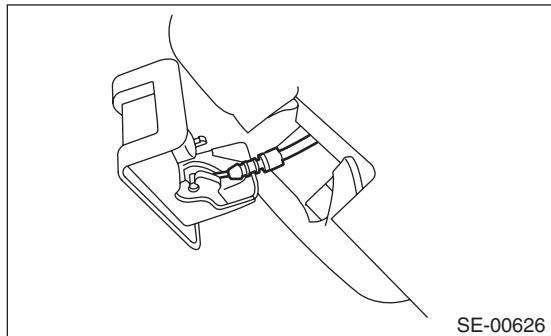

SE-00626

7) Remove the seat backrest cover.


8) Remove the hog rings (A) and hooks at the rear face of the backrest.

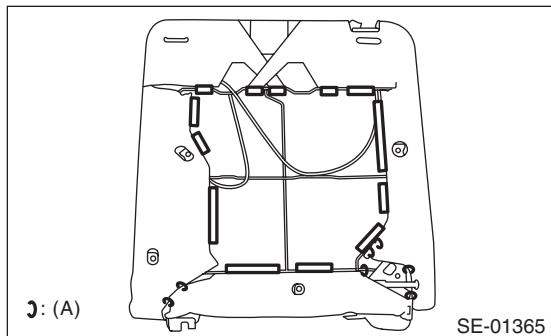

Ⓐ: (A)

SE-01365

9) Remove the hog rings (A) on the front side of seat backrest.

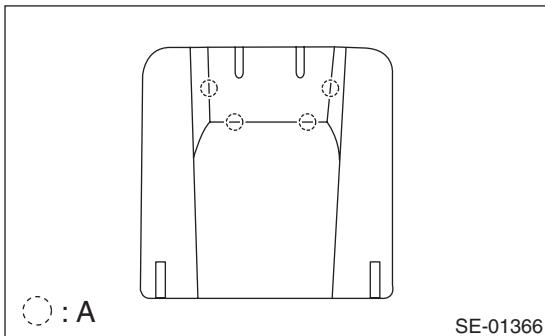


Ⓐ: A

SE-01366


10) Remove the screws, and remove the headrest hinge cover.

11) Remove the wires that are connected to the headrest assembly from the backrest frame.

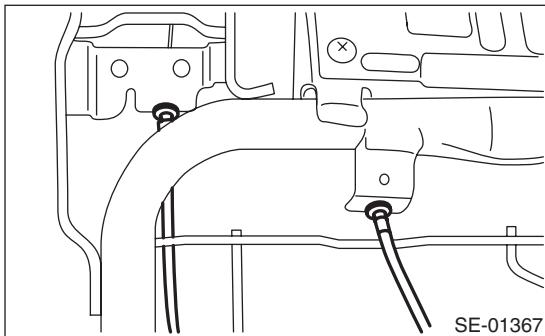

SE-01367

12) Remove the screws to remove the headrest assembly.

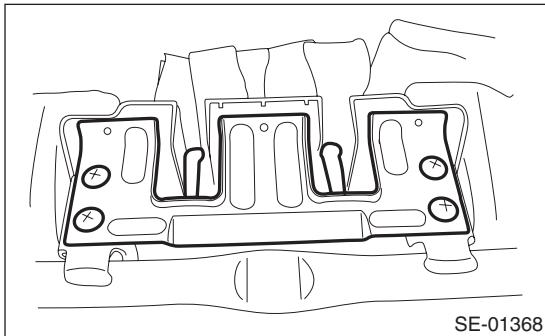

SE-01368



13) Pull out the frame from the seat backrest cushion.

D: ASSEMBLY**CAUTION:**

- Be careful not to stain or damage the backrest cover during assembly.
- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that there is no wrinkle or twisting on backrest cover.

1) Assemble the seat cover in the same manner as the front seat. <Ref. to SE-11, ASSEMBLY, Front Seat.>

2) Make sure that all hog rings (A) are attached securely.

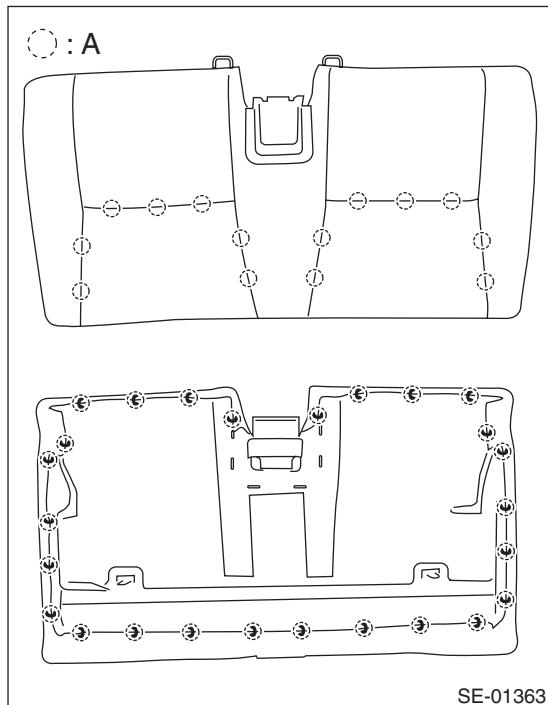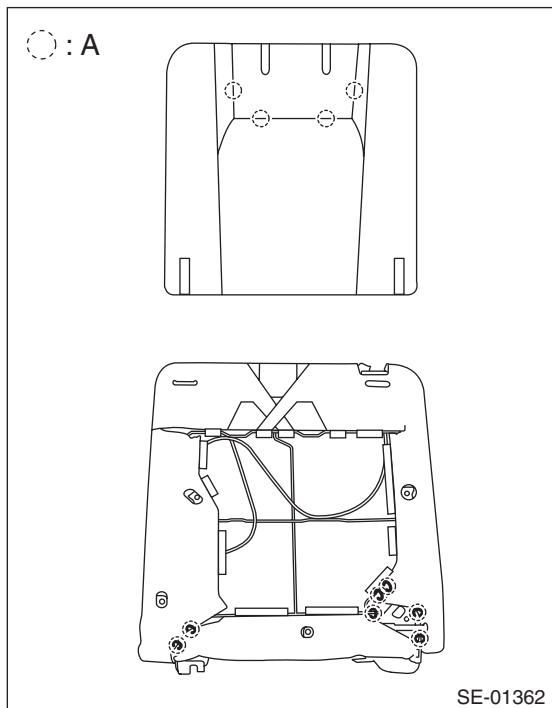

3) Assemble the seat cushion in the reverse order of disassembly.

4) Assemble the backrest in the reverse order of disassembly.

5) Assemble each inner belt assembly and each cover in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-2, COMPONENT, General Description.>

E: INSPECTION

Check that there is no tear or fray on the seat cover.