


## 16. Remote Openers

### A: REMOVAL

#### 1. FRONT HOOD OPENER

1) Remove the nuts, and remove the front hood opener.

2) Remove the cable from the front hood opener.

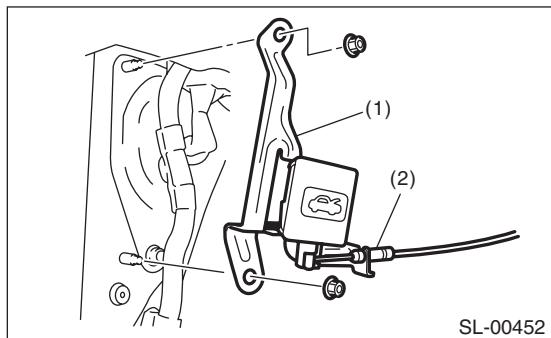

(1) Front hood opener

(2) Cable

#### 2. FUEL FILLER FLAP LID OPENER

1) Remove the second row seats. <Ref. to SE-15, REMOVAL, Second Seat.>

2) Remove the third-row seats. <Ref. to SE-22, REMOVAL, Third Seat.>

3) Remove the following side trims. <Ref. to EI-44, REMOVAL, Side Trim.>


- Front door scuff plate LH
- Rear door scuff plate LH
- Center pillar lower trim

4) Remove the right rear quarter trim. <Ref. to EI-46, REMOVAL, Rear Quarter Trim.>

5) Turn over the floor mat to remove the clips securing the cable.

6) Remove the cover.

7) Remove the bolt and nut, and then detach the pull handle assembly.

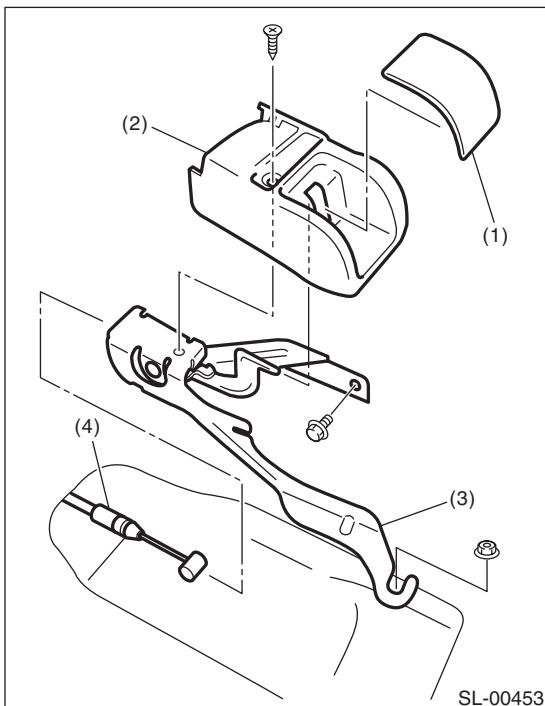


(1) Pull lever

(2) Cover

(3) Pull handle ASSY

(4) Cable

8) Remove the cable from pull handle assembly.  
9) Rotate the fuel lock inside the quarter panel to 90° and remove. (Either right or left turn)

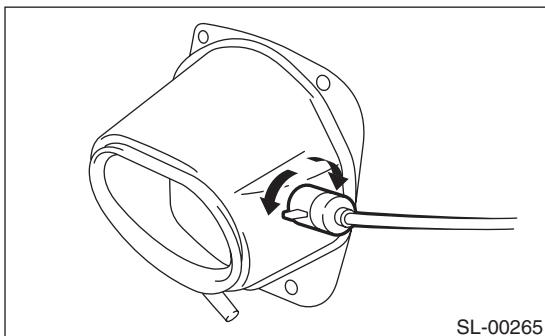

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

<Ref. to SL-4, FRONT HOOD LOCK AND REMOTE OPENERS, COMPONENT, General Description.>

### C: INSPECTION

Make sure the front hood and fuel filler lid open and close smoothly.