

19. Security Control Module

A: NOTE

The control of security system is carried out in body integrated unit. Refer to the section of body integrated unit for work.

- Removal <Ref. to SL-47, REMOVAL, Body Integrated Unit.>
- Installation <Ref. to SL-47, INSTALLATION, Body Integrated Unit.>