

23.Body Integrated Unit


A: REMOVAL

NOTE:

- When replacing the body integrated unit, check the current setting and note it. <Ref. to LAN(diag)-17, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>
 - When replacing the body integrated unit, all immobilizer keys also must be replaced and registered again. Prepare the new immobilizer key and security ID plate.
- 1) Disconnect the ground cable from battery.
 - 2) Remove the instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Lower Cover.>
 - 3) Disconnect the connector of body integrated unit.

CAUTION:

- **Be careful to keep water and other foreign materials away from body integrated unit.**
 - **Do not install or register an immobilizer related module of other registered vehicles in order to diagnose failures or inspect functions.**
- 4) Remove two mounting nuts for body integrated unit bracket, and remove the bracket.

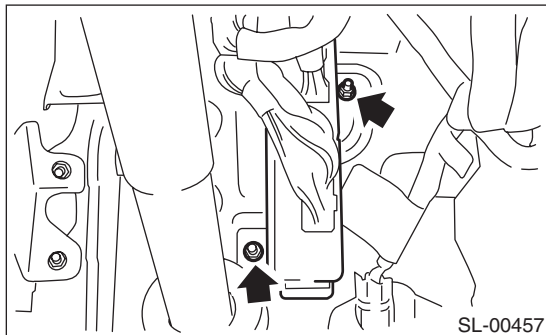

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- When the same body integrated unit is reinstalled in the same vehicle, it is not necessary to register the immobilizer again.
- Make sure that there are no differences from the contents of the current settings after installation. <Ref. to LAN(diag)-17, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>