


## 5. Front Inner Remote

### A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-36, REMOVAL, Door Trim.>
- 2) Remove the cable from the cable holder.
- 3) Remove the screw, move the inner remote to the rear, and remove from the panel.
- 4) Remove the cable (1).
- 5) Remove the cable end (2), and remove the inner remote.

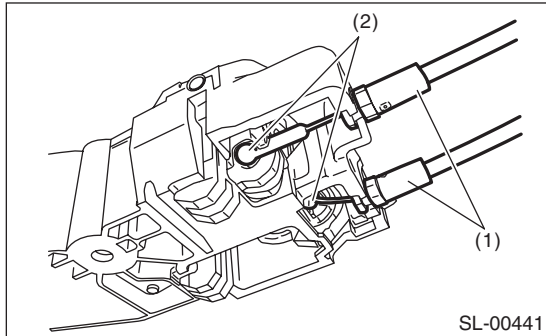

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check the cables of the remote handle and lock knob for deformation. If any deformation is found, correct the deformation, as this may cause the improper operation. Replace the front door latch & door lock actuator assembly, if the deformation can not be corrected.
- 2) Check the remote handle and lock knob for smooth operation.