


12.Rear Washer

A: REMOVAL

- 1) Remove the rear gate upper trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the claw of the nozzle from the backside of rear gate panel with a flat tip screwdriver or equivalent, and remove the washer nozzle.

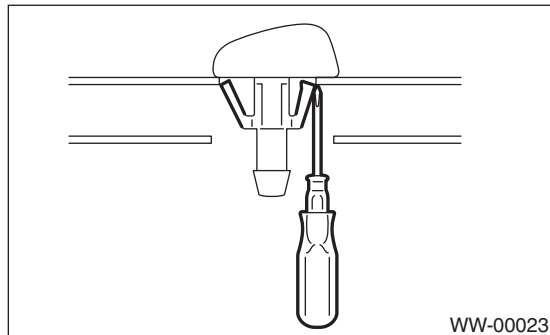

B: INSTALLATION


Install in the reverse order of removal.

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.

NOTE:

Washer injection position can not be adjusted.

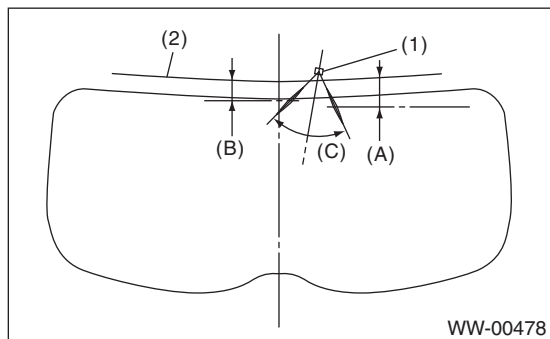

- (1) Nozzle
- (2) Upper edge of the rear gate glass
- (A) From rear gate glass upper end to center of washer fluid spraying: 71 mm (2.8 in)
- (B) From rear gate glass upper end to center of washer fluid spraying: 56 mm (2.2 in)
- (C) 72°

	Page
1. General Description	2
2. Audio System	3
3. Navigation System	4
4. Rearview Camera System	6
5. Multi-function Display (MFD) System	7
6. Rear Entertainment System	8
7. Control Panel	9
8. Audio	13
9. Front Speaker	14
10. Center Speaker	15
11. Tweeter	16
12. Rear Speaker	17
13. Woofer	18
14. Power Amplifier	19
15. Antenna	20
16. Antenna Amplifier	24
17. Noise Suppressor	25
18. Navigation Display	26
19. Navigation Body	27
20. Navigation Switch	28
21. GPS Antenna	29
22. Rearview Mirror (RCD Model)	30
23. Rearview Camera	31
24. Rearview Camera Control Unit	32
25. Multi-function Display (MFD)	33
26. Multi-function Switch	34
27. Rear Entertainment	35
28. AUX Input Terminal	36
29. Front Accessory Power Supply Socket	37
30. Rear Accessory Power Supply Socket	38
31. Steering Satellite Switch	39