

## General Diagnostic Table

PARKING BRAKE

---

### 5. General Diagnostic Table

#### A: INSPECTION

| Symptom          | Possible cause                               | Corrective action   |
|------------------|----------------------------------------------|---------------------|
| Brake drag       | Parking brake pedal is misadjusted.          | Adjust.             |
|                  | Parking brake cable does not move.           | Correct or replace. |
|                  | Parking brake shoe clearance is maladjusted. | Adjust.             |
|                  | Return spring is faulty.                     | Replace.            |
| Noise from brake | Return spring is faulty.                     | Replace.            |
|                  | Brake shoe spring fault                      | Replace.            |

# POWER ASSISTED SYSTEM (POWER STEERING)

*PS*

---

|                                    | Page |
|------------------------------------|------|
| 1. General Description .....       | 2    |
| 2. Steering Wheel .....            | 12   |
| 3. Universal Joint .....           | 13   |
| 4. Tilt Steering Column .....      | 15   |
| 5. Steering Gearbox .....          | 18   |
| 6. Pipe Assembly .....             | 38   |
| 7. Oil Pump .....                  | 42   |
| 8. Reservoir Tank .....            | 49   |
| 9. Power Steering Fluid .....      | 50   |
| 10. General Diagnostic Table ..... | 51   |