

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

11. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Detailed code	Item	Content of diagnosis	Reference
C0021	4211	Front Right ABS Sensor Circuit Open	Front ABS wheel speed sensor RH is open	<Ref. to VDC(diag)-47, DTC C0021 FRONT RIGHT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0022	4221	Front Right ABS Sensor Signal	Front ABS wheel speed sensor RH signal malfunction	<Ref. to VDC(diag)-51, DTC C0022 FRONT ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4222	FR Wheel Speed Sensor Noise	Front ABS wheel speed sensor RH signal noise	<Ref. to VDC(diag)-51, DTC C0022 FRONT RIGHT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0023	4231	Front Left ABS Sensor Circuit Open	Front ABS wheel speed sensor LH is open	<Ref. to VDC(diag)-47, DTC C0023 FRONT LEFT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0024	4241	Front Left ABS Sensor Signal	Front ABS wheel speed sensor LH signal malfunction	<Ref. to VDC(diag)-51, DTC C0024 FRONT ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4242	FL Wheel Speed Sensor Noise	Front ABS wheel speed sensor LH signal noise	<Ref. to VDC(diag)-51, DTC C0024 FRONT LEFT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0025	4251	Rear Right ABS Sensor Circuit Open	Rear ABS wheel speed sensor RH is open	<Ref. to VDC(diag)-47, DTC C0025 REAR RIGHT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0026	4261	Rear Right ABS Sensor Signal	Rear ABS wheel speed sensor RH signal malfunction	<Ref. to VDC(diag)-51, DTC C0026 REAR ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4262	RR Wheel Speed Sensor Noise	Rear ABS wheel speed sensor RH signal noise	<Ref. to VDC(diag)-51, DTC C0026 REAR RIGHT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0027	4271	Rear Left ABS Sensor Circuit Open	Rear ABS wheel speed sensor LH is open	<Ref. to VDC(diag)-48, DTC C0027 REAR LEFT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0028	4281	Rear Left ABS Sensor Signal	Rear ABS wheel speed sensor LH signal malfunction	<Ref. to VDC(diag)-52, DTC C0028 REAR ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4282	RL Wheel Speed Sensor Noise	Rear ABS wheel speed sensor LH signal noise	<Ref. to VDC(diag)-51, DTC C0028 REAR LEFT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0031	4311	FR Hold Valve Malfunction	Front inlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-54, DTC C0031 FRONT INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0032	4321	FR Pressure Reducing Valve Malfunction	Front outlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0032 FRONT OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0033	4331	FL Hold Valve Malfunction	Front inlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0033 FRONT INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Item	Content of diagnosis	Reference
C0034	4341	FL Pressure Reducing Valve Malfunction	Front outlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0034 FRONT OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0035	4351	RR Hold Valve Malfunction	Rear inlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0035 REAR INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0036	4361	RR Pressure Reducing Valve Malfunction	Rear outlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0036 REAR OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0037	4371	RL Hold Valve Malfunction	Rear inlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0037 REAR INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0038	4381	RL Pressure Reducing Valve Malfunction	Rear outlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0038 REAR OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0061	4611	VDC Switchover Valve (P)	Primary linear valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0061 VDC SWITCHOVER VALVE (P), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0062	4621	VDC Switchover Valve (S)	Secondary linear valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-55, DTC C0062 VDC SWITCHOVER VALVE (S), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0063	4631	VDC Switchover Valve	Linear valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-56, DTC C0063 VDC SWITCHOVER VALVE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0041	4411	Internal ECM	VDC control module malfunction	<Ref. to VDC(diag)-59, DTC C0041 ECM INTERNAL PROBLEM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0042	4421	Power Supply Voltage Low	Power voltage malfunction	<Ref. to VDC(diag)-61, DTC C0042 POWER VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4422	Power Supply Voltage High		
C0047	C471	Improper CAN Communication	Improper CAN communication	<Ref. to VDC(diag)-64, DTC C0047 IMPROPER CAN COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0051	4511	Valve Relay Open Circuit	Open valve relay	<Ref. to VDC(diag)-65, DTC C0051 VALVE RELAY OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4512	Valve Relay Short Circuit	Shorted valve relay	<Ref. to VDC(diag)-67, DTC C0051 VALVE RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Item	Content of diagnosis	Reference
C0052	4521	Motor Relay Circuit Open	Open motor/motor relay	<Ref. to VDC(diag)-68, DTC C0052 MOTOR AND MOTOR RELAY OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4522	Motor Relay Short Circuit	Shorted motor/motor relay	<Ref. to VDC(diag)-68, DTC C0052 MOTOR AND MOTOR RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4523	Motor Do Not Work	Motor does not rotate	<Ref. to VDC(diag)-69, DTC C0052 MOTOR DO NOT WORK, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4524	Motor Malfunction	Motor malfunction	<Ref. to VDC(diag)-68, DTC C0052 MOTOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4525	Motor Fail Safe Relay Short	Shorted motor fail safe relay	<Ref. to VDC(diag)-68, DTC C0052 MOTOR FAIL SAFE RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0054	4541	Brake Lamp SW Open Circuit	Open brake light switch	<Ref. to VDC(diag)-71, DTC C0054 BRAKE LAMP SWITCH OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0056	4561	G Sensor Signal Stick	G sensor output is stuck	<Ref. to VDC(diag)-73, DTC C0056 G SENSOR OUTPUT FREEZE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4562	G Sensor Signal	Faulty G sensor signal	<Ref. to VDC(diag)-74, DTC C0056 G SENSOR SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4563	Yaw Rate G Sensor Power Supply V	Yaw rate & G sensor power supply voltage malfunction	<Ref. to VDC(diag)-75, DTC C0056 YAW RATE G SENSOR POWER SUPPLY VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4564	G Sensor Output	Faulty G sensor output	<Ref. to VDC(diag)-77, DTC C0056 G SENSOR OUTPUT MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C565	G Sensor Communication	Faulty G sensor communication	<Ref. to VDC(diag)-91, DTC C0056 G SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4566	G Sensor Internal Problem	Malfunction in G sensor	<Ref. to VDC(diag)-90, DTC C0056 G SENSOR INTERNAL PROBLEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0057	C571	ECM Communication Circuit	EGI communication	<Ref. to VDC(diag)-78, DTC C0057 ECM COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C573	TCM Communication Circuit	AT communication	<Ref. to VDC(diag)-79, DTC C0057 AT COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4574	Transmission System	Transmission system failure	<Ref. to VDC(diag)-80, DTC C0057 TRANSMISSION SYSTEM FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4575	VDC Control Interruption Because of Engine Instructions	Engine system failure	<Ref. to VDC(diag)-81, DTC C0057 ENGINE SYSTEM FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Item	Content of diagnosis	Reference
C0071	4711	Steering Angle Sensor Counter	Steering angle sensor internal malfunction	<Ref. to VDC(diag)-82, DTC C0071 STEERING ANGLE SENSOR INTERNAL PROBLEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C712	No Signal from Steering Angle Sensor	Steering angle sensor communication malfunction	<Ref. to VDC(diag)-84, DTC C0071 STEERING ANGLE SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4715	Steering Angle Sensor at 0 Degree		<Ref. to VDC(diag)-84, DTC C0071 STEERING ANGLE SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4713	Steering Sensor Signal Freeze	Steering angle sensor signal is stuck	<Ref. to VDC(diag)-87, DTC C0071 STEERING ANGLE SENSOR SIGNAL FREEZE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4714	Steering Sensor Not Calibration	Steering angle sensor calibration not completed	<Ref. to VDC(diag)-88, DTC C0071 STEERING ANGLE SENSOR CALIBRATION NON COMPLETION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0072	4721	Yaw Rate Sensor Signal	Yaw rate sensor signal malfunction	<Ref. to VDC(diag)-89, DTC C0072 YAW RATE SENSOR SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4722	Yaw Rate Sensor Internal Problem	Yaw rate sensor internal malfunction	<Ref. to VDC(diag)-91, DTC C0072 YAW RATE SENSOR INTERNAL PROBLEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C723	Yaw Rate Sensor Communication	Yaw rate sensor communication malfunction	<Ref. to VDC(diag)-92, DTC C0072 YAW RATE SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4724	Yaw Rate Sensor Oscillation	Yaw rate sensor oscillation malfunction	<Ref. to VDC(diag)-88, DTC C0072 YAW RATE SENSOR OSCILLATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0074	4741	Pressure Sensor Open Circuit	Pressure sensor is open	<Ref. to VDC(diag)-94, DTC C0074 PRESSURE SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4742	Pressure Sensor Signal Freeze	Pressure sensor signal is stuck	<Ref. to VDC(diag)-93, DTC C0074 PRESSURE SENSOR SIGNAL FREEZE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4743	Pressure Sensor 0 Point	Pressure sensor 0 point	<Ref. to VDC(diag)-96, DTC C0074 PRESSURE SENSOR 0 POINT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4744	Pressure Sensor Noise	Pressure sensor noise	<Ref. to VDC(diag)-97, DTC C0074 PRESSURE SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4745	Pressure Sensor Output Rise	Pressure sensor output rise	<Ref. to VDC(diag)-93, DTC C0074 PRESSURE SENSOR OUTPUT RISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>