


11.TCS OFF Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the TCS OFF switch.

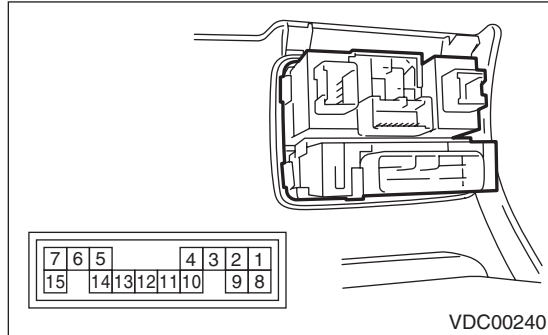

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between the TCS OFF switch terminals.

Switch position	Terminal No.	Standard value
ON	5 — 15	Less than 1 Ω
OFF	5 — 15	1 M Ω or more

If NG, replace the TCS OFF switch.

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	10
4. Electrical Component Location	12
5. Control Module I/O Signal	14
6. Subaru Select Monitor	17
7. Read Diagnostic Trouble Code (DTC)	23
8. Inspection Mode	24
9. Clear Memory Mode	25
10. Warning Light Illumination Pattern	26
11. List of Diagnostic Trouble Code (DTC)	43
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	47
13. General Diagnostic Table	99