

# Schedule

PERIODIC MAINTENANCE SERVICES

## 2. Schedule

### A: MAINTENANCE SCHEDULE 1

	Maintenance interval [Number of months or km (miles), whichever occurs first]																		
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks
× 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
× 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1 Engine oil	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2 Engine oil filter	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3 Spark plug									R								R		
4 V-belt					I				I				I		R				
5 Fuel line					(I)				(I)				(I)				I	Note (1)	
6 Fuel filter									R							R	Note (1)		
7 Air cleaner element				R				R				R				R	Note (2)		
8 Cooling system				I				I				I				I			
9 Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
10 ATF					I				I				I			I			
11 Front & rear differential gear oil					I				I				I			I			
12 Brake line		I		I		I		I		I		I	I		I	I			
13 Brake fluid				R				R				R				R			
14 Disc brake pad and disc		I		I		I		I		I		I	I		I	I			
15 Parking brake		I		I		I		I		I		I	I		I	I			
16 Suspension	I		I		I		I		I		I	I	I		I	I			
17 Wheel bearing								(I)								(I)			
18 Axle boots and joints		I		I		I		I		I		I	I		I	I			
19 Tire rotation	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	Note (3)		
20 Steering system (power steering)		I		I		I		I		I		I	I		I	I			
21 SRS airbag system	Inspect every 10 years																		
22 A/C filter	Replace every 15 months or 24,000 km (15,000 miles)																Note (4)		

Symbols used:

R: Replace

I: Inspection

P: Perform

(R): Recommended service for maintaining better vehicle performance

(I): Inspections recommended for vehicle safety

#### NOTE:

(1) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

(2) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

(3) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.8 mm (0.071 in) or less.

(4) When the vehicle is used under extremely dusty conditions, the A/C filter should be replaced more frequently than the periodic replacement.

# Schedule

## PERIODIC MAINTENANCE SERVICES

### B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
Front and rear differential gear oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						