


## 6. V-belt

### A: INSPECTION


- 1) Replace the belts if cracks, fraying or wear are found.
- 2) Make sure that the V-belt automatic belt tension indicator (A) is within the range of its use limit (D).

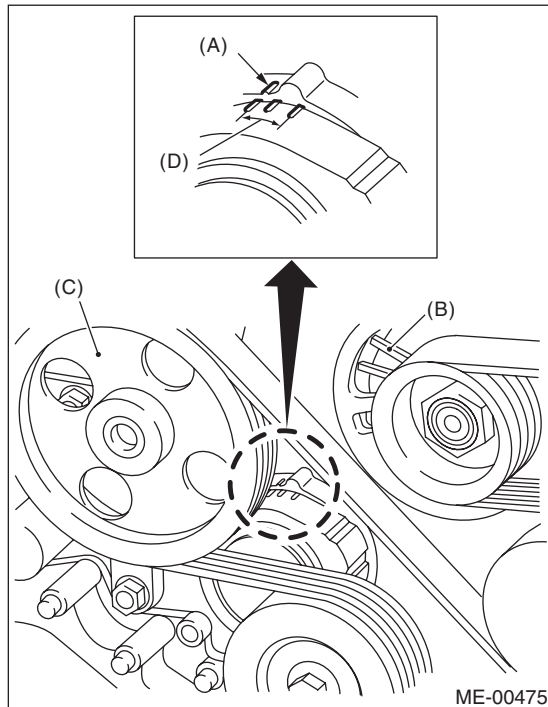

- (A) Indicator
- (B) Generator
- (C) Power steering oil pump
- (D) Service limit

### B: REPLACEMENT

- 1) Remove the collector cover.
- 2) Install the tool to belt tension adjuster assembly installation bolt.
- 3) Rotate the tool clockwise and loosen the V-belt to remove.

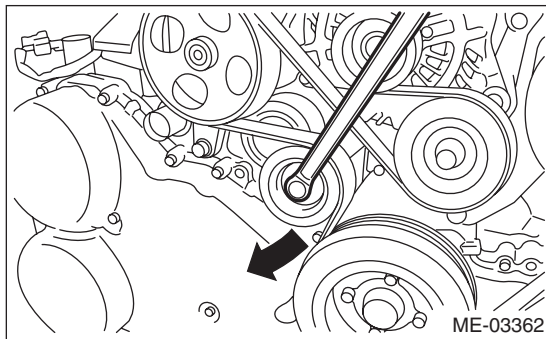

- 4) Install in the reverse order of removal.