



## 9. Air Cleaner Element

### A: REPLACEMENT

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from mass air flow sensor.
- 3) Remove the clips (A) on air cleaner case.

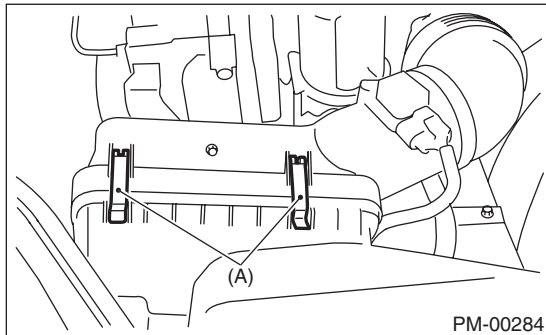

- 4) While pushing the duct toward the back end of the vehicle, remove the air cleaner element.

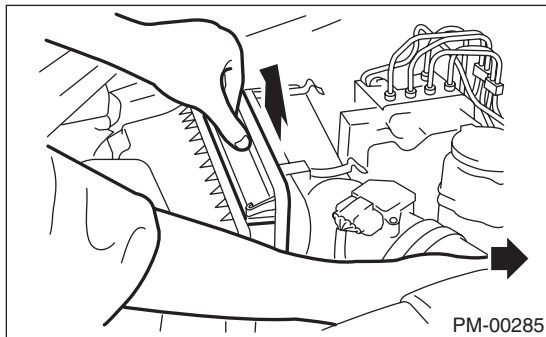

- 5) Check that there are no foreign objects in the clean side.
- 6) Install in the reverse order of removal.

#### CAUTION:

**When replacing the air cleaner element, use SUBARU Genuine air cleaner element according to the engine type. Using other air cleaner element may affect engine performance.**

#### NOTE:

Fasten with a clip after inserting the lower tab of case.

