


## 20. Air Breather Hose


### A: REMOVAL

- 1) Remove the collector cover.
- 2) Remove the air intake chamber and intake boot.  
<Ref. to IN(H6DO)-7, REMOVAL, Air Intake Chamber.>
- 3) Disconnect the air breather hose.

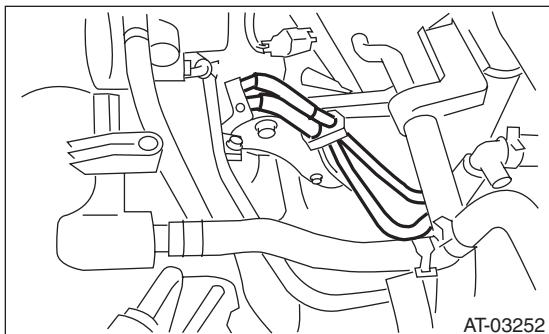

### B: INSTALLATION

- 1) Connect the air breather hose.

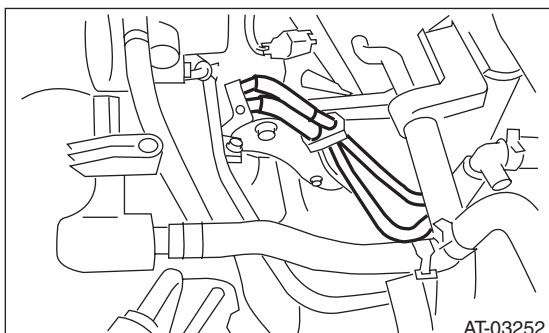

- 2) Install the air intake chamber and intake boot.  
<Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Chamber.>
- 3) Install the collector cover.

### C: INSPECTION

Check that the air breather hose is not cracked or clogged.