

General Diagnostic Table

CONTROL SYSTEMS

7. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable, or inspect circuit.
	Back-up light does not illuminate.	Adjust the select cable, or inspect circuit.
	AT shift lock system does not operate normally.	Adjust the select cable, or inspect circuit.
	Will not change to manual or sports mode.	Inspect the mode change switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

AUTOMATIC TRANSMISSION

5AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	28
3. Differential Gear Oil	30
4. Road Test	31
5. Stall Test	32
6. Time Lag Test	33
7. Line Pressure Test	34
8. Transfer Clutch Pressure Test	35
9. Automatic Transmission Assembly	36
10. Transmission Mounting System	43
11. Extension Case Oil Seal	45
12. Differential Side Retainer Oil Seal	46
13. Inhibitor Switch	47
14. Front Vehicle Speed Sensor	48
15. Rear Vehicle Speed Sensor	50
16. Turbine Speed Sensor 1	51
17. Control Valve Body	52
18. Transmission Control Module (TCM)	54
19. ATF Cooler Pipe and Hose	55
20. Air Breather Hose	58
21. Oil Charge Pipe	59
22. Torque Converter Assembly	60
23. Drive Plate	61
24. Extension Case	62
25. Transfer Clutch	64
26. Rear Drive Shaft	66
27. Reduction Driven Gear	67
28. Center Differential Carrier	70
29. Parking Pawl	72
30. Converter Case	74
31. Oil Pump Cover	76
32. Drive Pinion Shaft Assembly	80
33. Front Differential Assembly	85
34. AT Main Case	90
35. Transmission Control Device	101
36. Diagnostics with Phenomenon	103