

## 2. Audio System

### A: WIRING DIAGRAM

<Ref. to WI-115, WIRING DIAGRAM, Audio System.>

### B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	1. Check the fuse and power supply for audio. 2. Check the audio ground. 3. Remove the audio and repair them.
A specific speaker does not operate.	1. Check the speaker. 2. Check the output circuit between audio and speaker.
Audio generates noise with engine is running.	1. Check the audio ground. 2. Check the generator. 3. Check the ignition coil. 4. Remove the audio and repair them.
Volume is low in AM and FM modes or interference noise occurs.	1. Check the antenna. 2. Check the rear window defogger. 3. Check the antenna amplifier. 4. Check the noise suppressor. 5. Check the audio ground. 6. Remove the audio and repair them.
Noise occurs at the rear window defogger operation.	1. Check the rear window defogger.

### C: NOTE

For removal of each component of the audio system, refer to the respective section.

- Audio unit <Ref. to ET-13, Audio.>
- Control panel <Ref. to ET-9, Control Panel.>
- Front speaker <Ref. to ET-14, Front Speaker.>
- Center speaker <Ref. to ET-15, Center Speaker.>
- Tweeter <Ref. to ET-16, Tweeter.>
- Rear speaker <Ref. to ET-17, Rear Speaker.>
- Woofer <Ref. to ET-18, Woofer.>
- Antenna <Ref. to ET-20, Antenna.>