


11. Roof Molding

A: REMOVAL


1) Turn over the edge of the roof molding, and remove the inside clips with flat tip screwdriver by sliding as arrow indicates.

Right side: slide towards the front of the vehicle.

Left side: slide towards the rear of the vehicle.

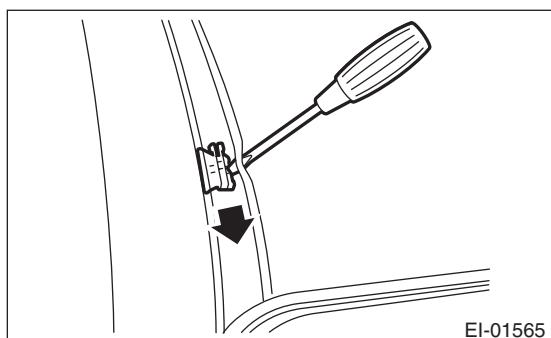

EI-01565

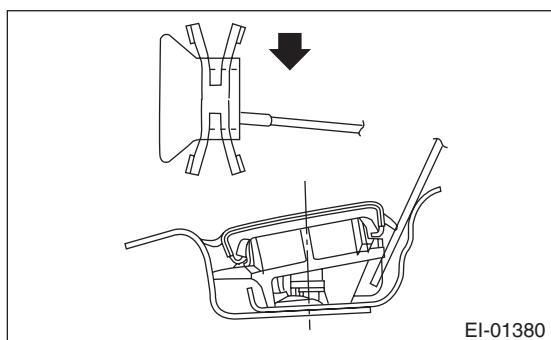


EI-01380

2) Pull the roof molding upward, and remove it from vehicle body.

3) Remove the roof trim. <Ref. to EI-52, Roof Trim.>

4) Remove the nuts, and remove the roof carrier attachment.

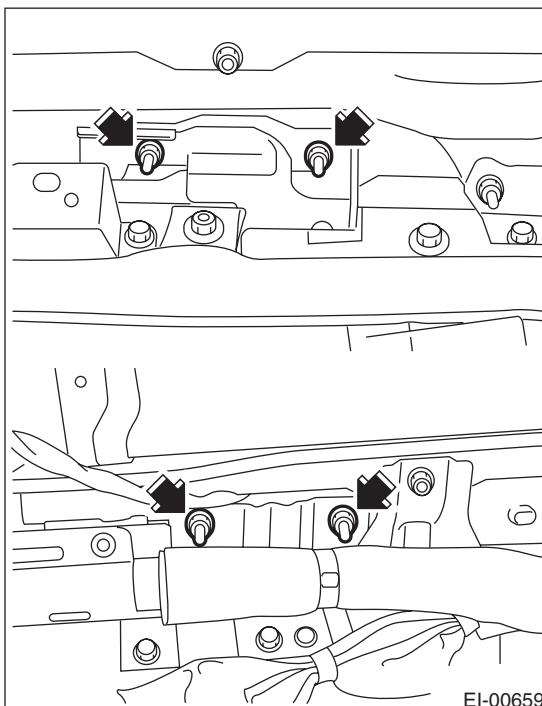

EI-00659

B: INSTALLATION

1) Install the roof carrier attachment.

Tightening torque:


10 N·m (1.0 kgf·m, 7.23 ft-lb)

2) Remove each clip from the roof molding, and install them to the vehicle side.

CAUTION:

Always replace clips that were damaged during removal of the roof molding.

3) Push the front end of the roof molding against the front window, and attach the forward positioning clip onto the rivet on the body.

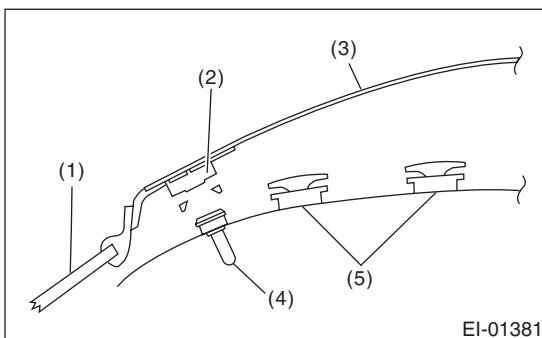

EI-01381

- (1) Windshield
- (2) Positioning clip
- (3) Roof molding
- (4) Rivet
- (5) Clip