



## 12. Roof Rail

### A: REMOVAL


1) Remove the roof rail cover front with the pawl (C) as a support point while removing clip (A) and pawl (B).

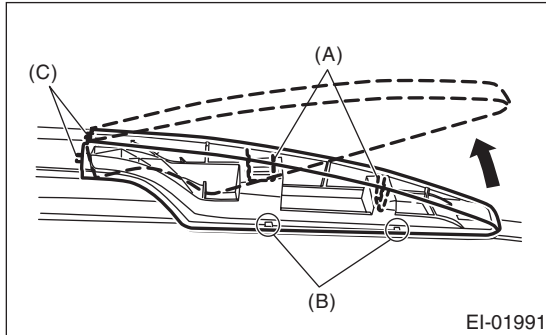

2) Remove the clips (A), and then remove the roof rail cover center.

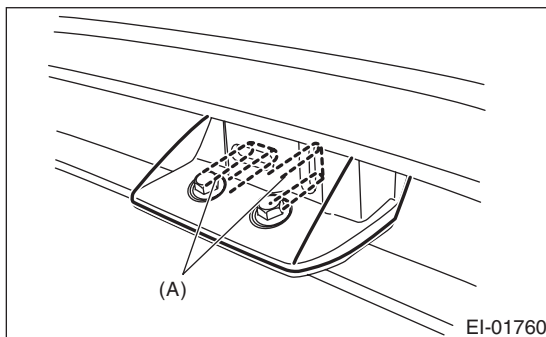

3) Remove the roof rail cover rear with the pawl (C) as a support point while removing clip (A) and pawl (B).

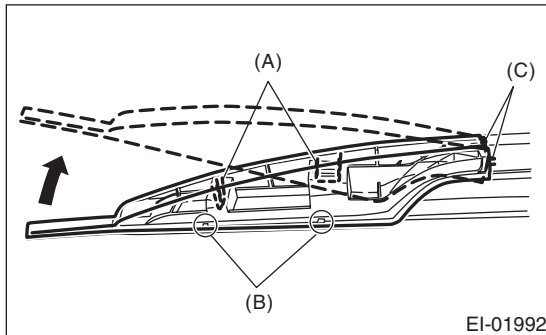

4) Remove the nuts and bolts, and remove the roof rail from the vehicle body.

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**