


Instrument Panel Lower Cover

EXTERIOR/INTERIOR TRIM

14. Instrument Panel Lower Cover


A: REMOVAL

- 1) Remove the front door scuff plate and front pillar lower trim. <Ref. to EI-45, REMOVAL, Side Trim.>
- 2) Remove the instrument panel side cover LH.

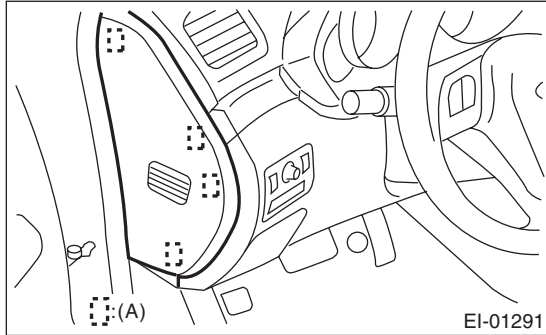


(A) Hook

- 3) Remove the clips, and remove the console side panel lower LH.

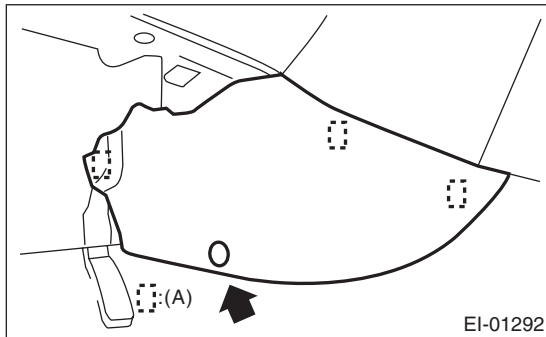


(A) Hook

- 4) Remove the clips, and remove the instrument panel lower cover under.

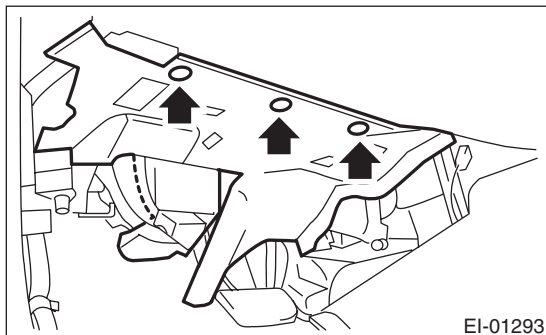

- 5) Remove the clip (A) and hooks, disconnect the connectors, and then remove the instrument panel lower cover upper.

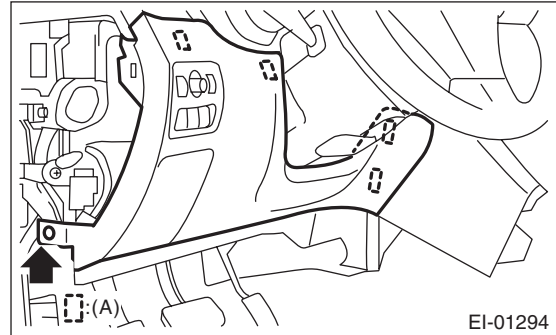

B: INSTALLATION

Install in the reverse order of removal.