


19.Side Trim

A: REMOVAL


1. FRONT PILLAR UPPER TRIM

- 1) Remove the cap (A) on the upper side of pillar trim, and remove the bolt inside.
- 2) Remove the front pillar upper trim.

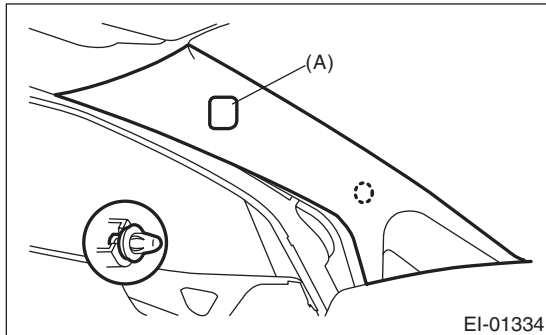


2. FRONT DOOR SCUFF PLATE

- 1) Remove the front door scuff plate.

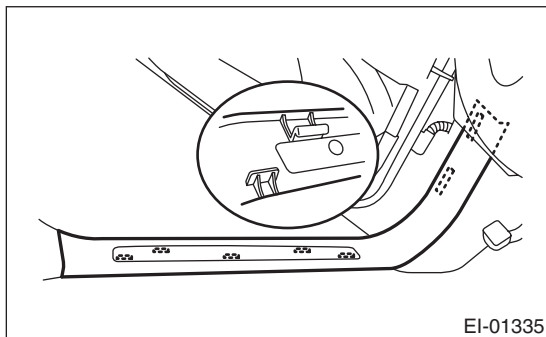

- 2) Remove the scuff plate outer.

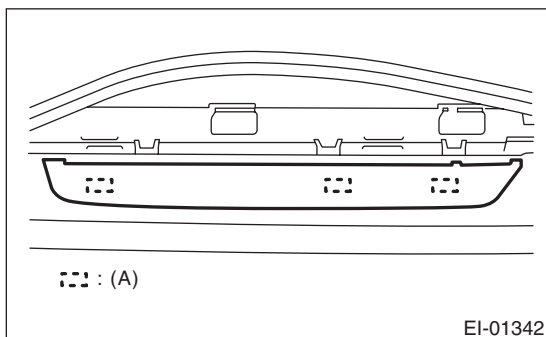


(A) Claw

3. FRONT PILLAR LOWER TRIM


- 1) Remove the front door scuff plate.

- 2) Remove the clip, and remove the front pillar trim.

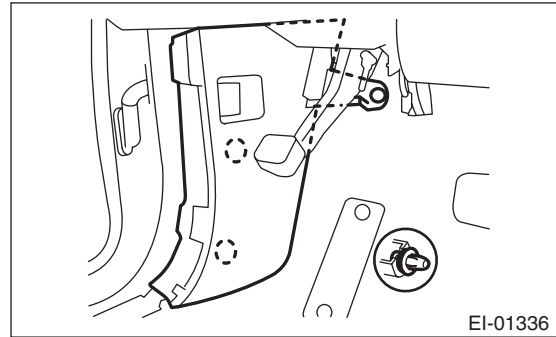


4. REAR DOOR SCUFF PLATE

- 1) Remove the clips and disengage the claws on the rear side of scuff plate, and then remove the rear door scuff plate.

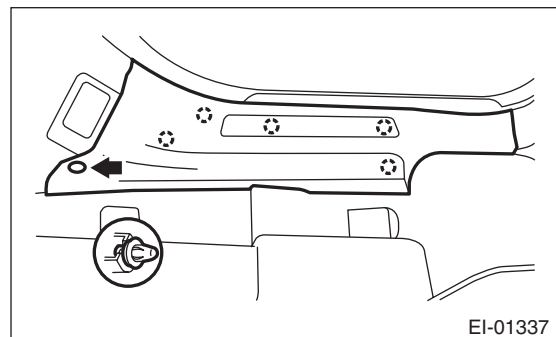

- 2) Remove the scuff plate outer.

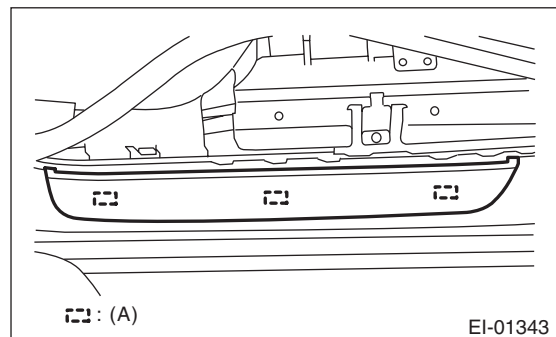

(A) Claw


5. CENTER PILLAR LOWER TRIM

- 1) Remove the front door scuff plate.
- 2) Remove the rear door scuff plate.


Side Trim

EXTERIOR/INTERIOR TRIM

3) Remove the clip, and remove the center pillar lower trim.

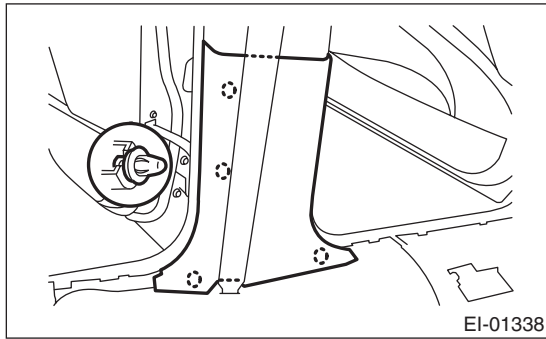


8) Remove the clip, and remove the center pillar upper trim.

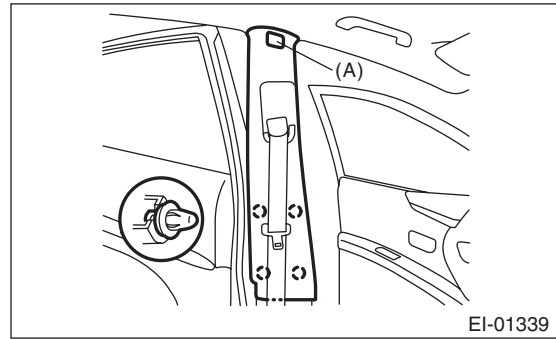


6. CENTER PILLAR UPPER TRIM

- 1) When removing the parts of passenger's side, disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the front door scuff plate.
- 3) Remove the rear door scuff plate.
- 4) Remove the center pillar lower trim.
- 5) Turn over the floor mat to remove the seat belt lower anchor bolt.

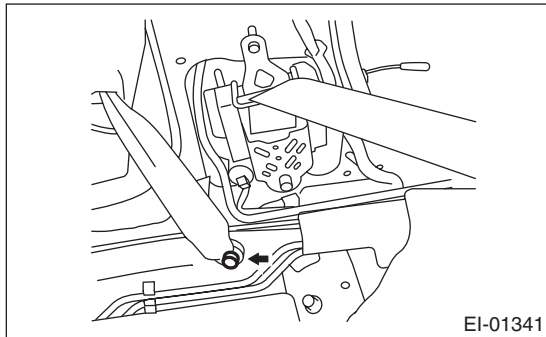

6) On passenger's side, disconnect the connector of the seat belt tension sensor.

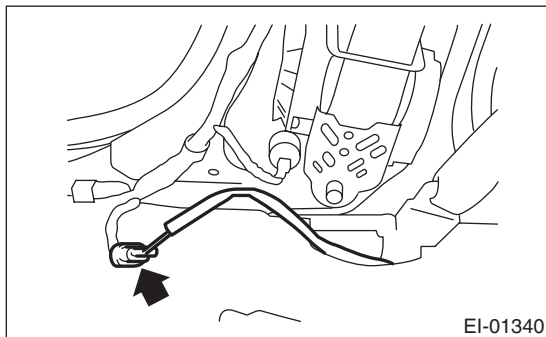

7) Remove cap (A) on the upper side of the pillar trim, and remove the bolt inside.

B: INSTALLATION

Install each side trim in the reverse order of removal.

NOTE:

When installing the side trim, make sure that the clips and hooks match the holes of vehicle body before pushing the parts.