


26.Heat Shield Cover


A: REMOVAL

1. FRONT HEAT SHIELD COVER

1) Remove the rear exhaust pipe.

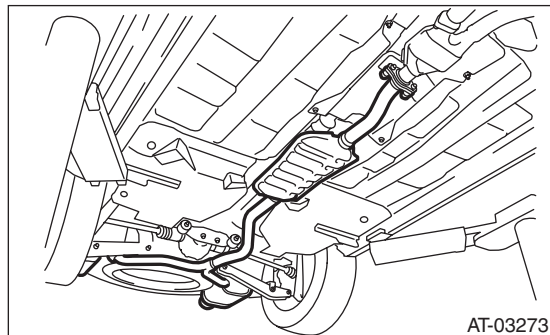


2) Remove the bolts to remove the front heat shield cover.

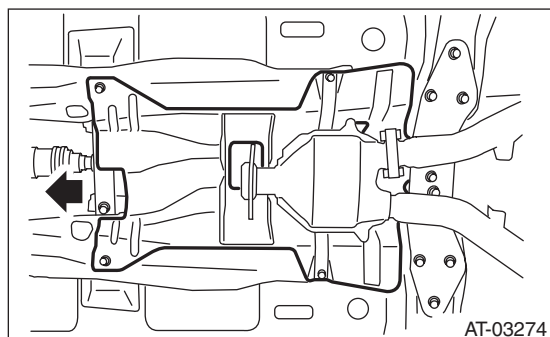

2. CENTER HEAT SHIELD COVER

1) Remove the fuel tank protector. <Ref. to EI-19, REMOVAL, Fuel Tank Protector.>


2) Remove the nut, bolt and clip to remove the center heat shield cover.

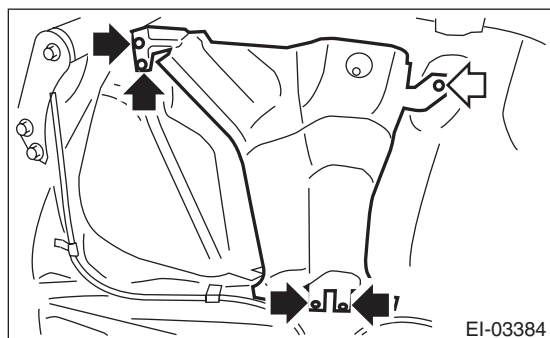

3. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX(H6DO)-7, REMOVAL, Rear Exhaust Pipe.>

2) Remove the rear heat shield cover.

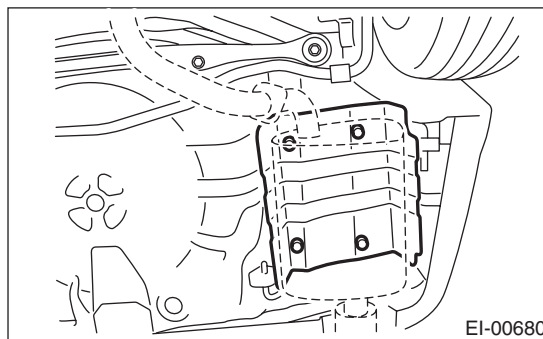

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to EI-16, HEAT SHIELD COVER, COMPONENT, General Description.>