


## 27.Trailer Hitch

### A: REMOVAL


- 1) Remove the spare tire hoist. <Ref. to WT-11, REMOVAL, Spare Tire Hoist.>
- 2) Remove the bolt, and then detach the main frame.

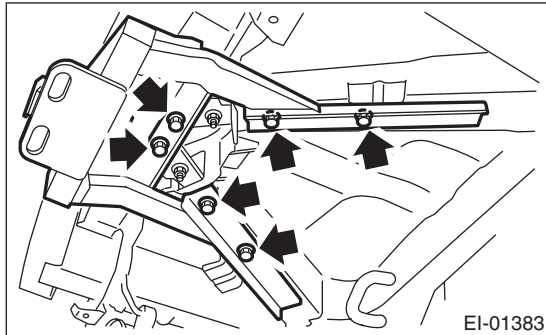

#### CAUTION:

**The trailer hitch main frame is heavy. Be careful when removing.**

- 3) Remove the bolts, and then remove the center frame.

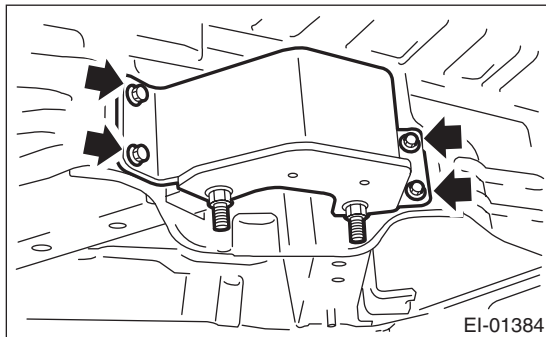

- 4) Remove the side frame from the vehicle.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**Refer to “COMPONENT” of “General Description”.**

**<Ref. to EI-17, TRAILER HITCH, COMPONENT, General Description.>**

## Trailer Hitch

EXTERIOR/INTERIOR TRIM

---

# EXTERIOR BODY PANELS

***EB***

---

|                              | Page |
|------------------------------|------|
| 1. General Description ..... | 2    |
| 2. Front Hood .....          | 12   |
| 3. Front Fender .....        | 15   |
| 4. Front Door .....          | 16   |
| 5. Front Sealing Cover ..... | 18   |
| 6. Rear Door .....           | 19   |
| 7. Rear Sealing Cover .....  | 21   |
| 8. Rear Gate .....           | 22   |