


## 3. Fuel Tank Protector

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts (A) and nuts (B), and then remove the fuel tank protector.

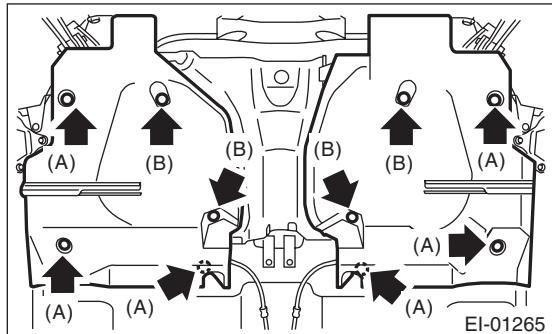

### B: INSTALLATION

#### CAUTION:

Be sure to replace the self-locking nuts with new ones.

Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to EI-3, UNDER PROTECTOR, COMPONENT, General Description.>*