


Remote Control Mirror Switch

GLASS/WINDOWS/MIRRORS

10. Remote Control Mirror Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the connector.

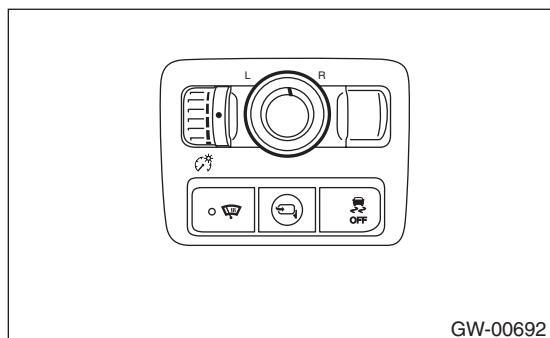

GW-00692

- 3) Remove the remote control mirror switch from instrument panel lower cover.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. REMOTE CONTROL MIRROR SWITCH

Move the remote control mirror switch to each position and check continuity between terminals.

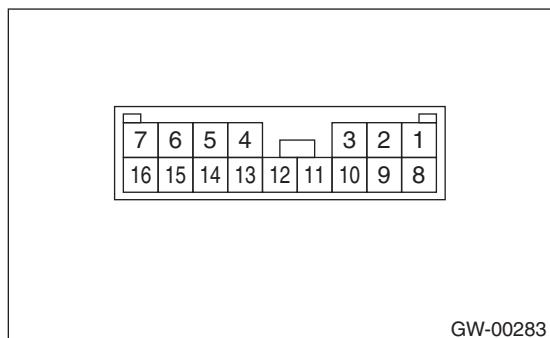

GW-00283

- Change over switch R

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 12 15 and 14	Less than 1 Ω
DOWN	10 and 15 12 and 14	Less than 1 Ω
LEFT	10 and 11 15 and 14	Less than 1 Ω
RIGHT	10 and 15 11 and 14	Less than 1 Ω


- Change over switch L

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 8 15 and 14	Less than 1 Ω
DOWN	10 and 15 8 and 14	Less than 1 Ω
LEFT	10 and 9 15 and 14	Less than 1 Ω
RIGHT	10 and 15 9 and 14	Less than 1 Ω

Replace the remote control mirror switch if defective.

2. ELECTRIC FOLDING SWITCH

Press the switch and check for continuity between the terminals.

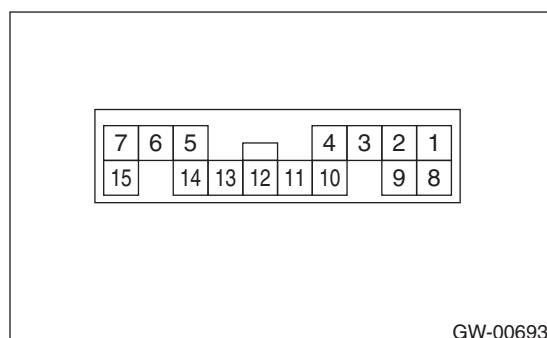

GW-00693

Switch position	Terminal No.	Standard
Folding	11 and 4 12 and 13	Less than 1 Ω
Unfolding	11 and 13 12 and 4	Less than 1 Ω

If NG, replace the switch.