

## 7. Scalp Cap


### A: REPLACEMENT

**CAUTION:**

**Do not remove caps such as scalp cap forcibly.**

**The lower hooks may be damaged.**


- 1) Remove the outer mirror. <Ref. to GW-15, REPLACEMENT, Outer Mirror.>
- 2) Disengage the claws (A) from inside of the outer mirror, and remove the scalp cap.

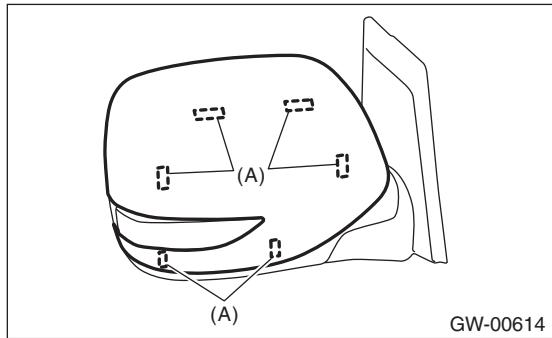

- 3) Disengage the claws (A) and (B) from inside of the outer mirror, and remove the mirror body cover.

**CAUTION:**

**Claw (B) cannot be disengaged from the inside of the outer mirror. When removing, be careful not to damage the parts.**

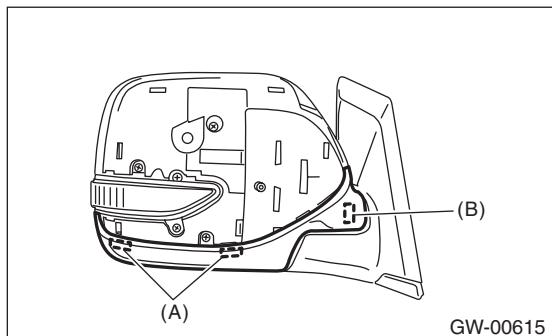

- 4) Install the scalp cap and mirror body cover clips (A) securely.