


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

8. Outer Mirror Assembly

A: REMOVAL

1) Remove the mirror gusset cover.

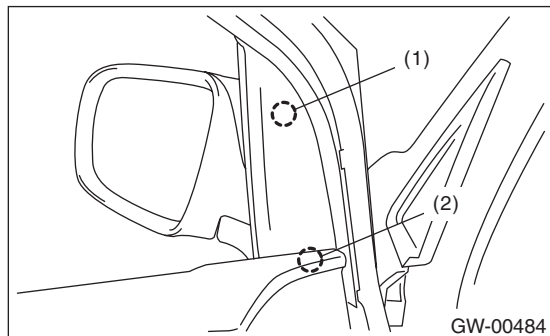


- (1) Clip
- (2) Hook

2) Remove the door trim. <Ref. to EI-37, REMOVAL, Door Trim.>

3) Disconnect the mirror connector.

4) Remove the screws to remove outer mirror assembly.

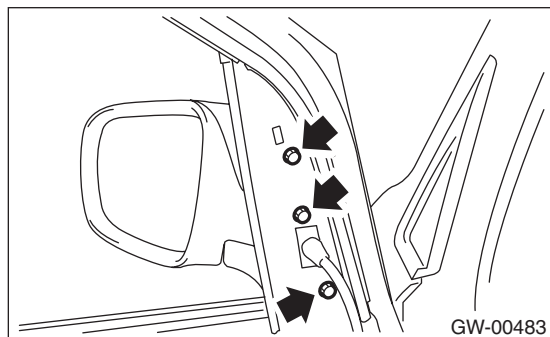


5) Remove the outer mirror assembly. (Model without door visor)


6) Using the upper part (A) of the mirror assembly as a supporting point, pull it upward while drawing the lower part. (Model with door visor)

CAUTION:

- Do not remove forcibly, otherwise door visor may be damaged.
- Apply protective tape as necessary in order to avoid scratching the door visor and mirror assembly.

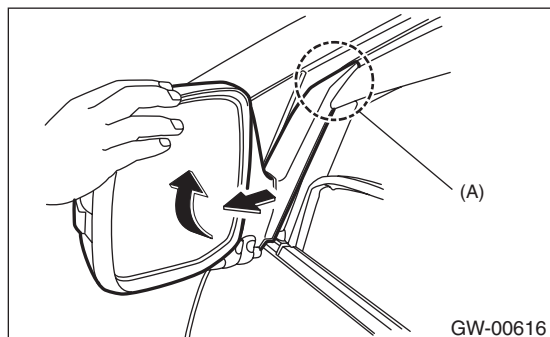

7) Pull the mirror assembly downward to remove from the vehicle body. (Model with door visor)

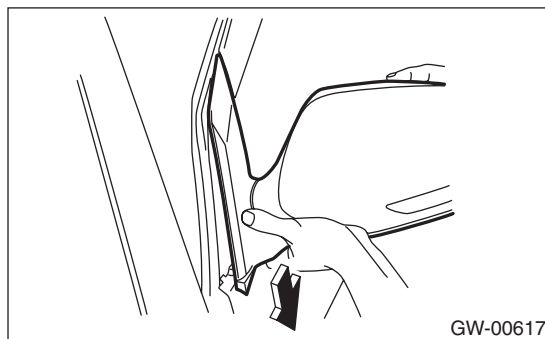

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, MIRROR, COMPONENT, General Description.>

C: INSPECTION

Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

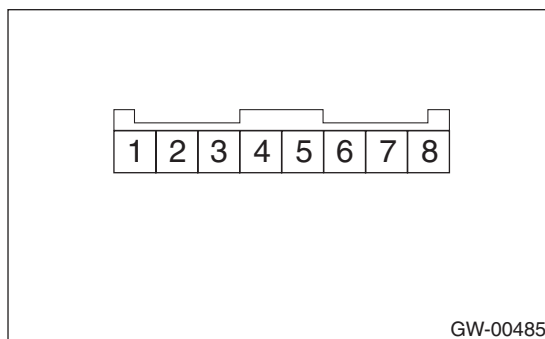

Mirror movement	Terminal No.
OFF	—
UP	5 (+) and 6 (–)
DOWN	6 (+) or 5 (–)
LEFT	8 (+) and 7 (–)
RIGHT	7 (+) or 8 (–)

Replace the outer mirror assembly if defective.