


## 9. Outer Mirror


### A: REPLACEMENT

- 1) Face the mirror upward.
- 2) Disconnect the ground cable from battery. (Model with mirror heater)
- 3) Use a flat tip screwdriver to remove clip (A).
- 4) Lift the lower mirror up to remove hooks (B).

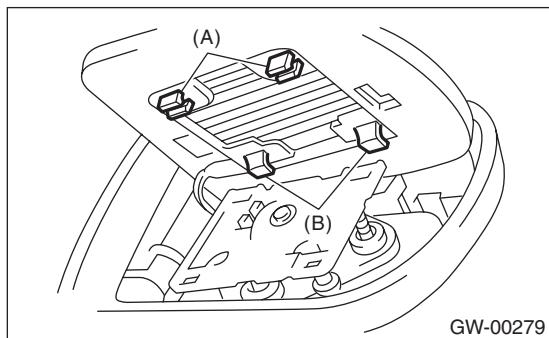

GW-00279

- 5) Disconnect the mirror heater connector from side of the mirror. (Model with mirror heater)

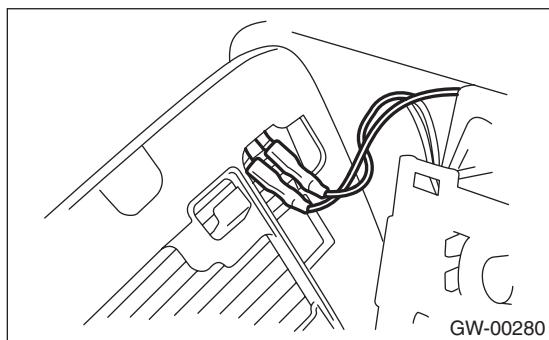


GW-00280

- 6) Catch the hooks (B) and install clips (A).

**CAUTION:**

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
- When installing the mirror, insert the hook and clip securely.

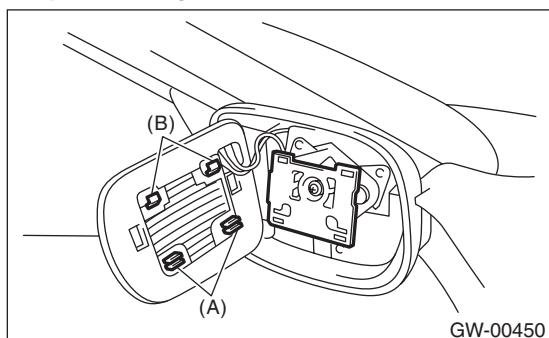

GW-00450