


# Relay and Fuse


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 19. Relay and Fuse

### A: LOCATION

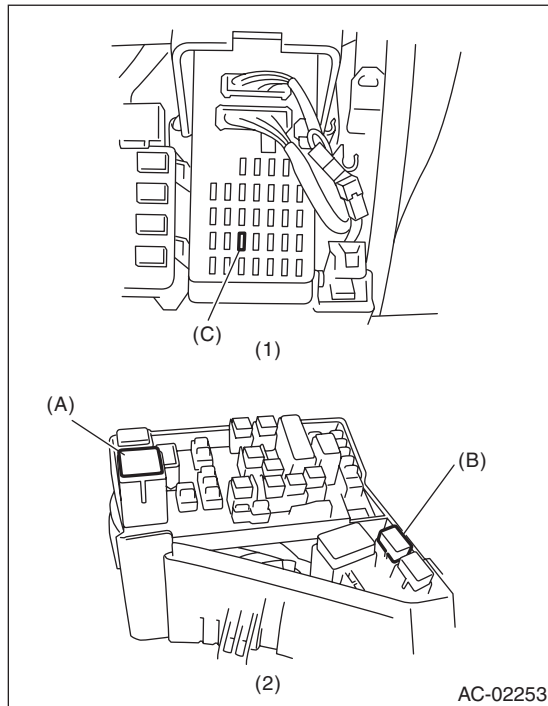

- (1) Joint box
- (2) Main fuse box

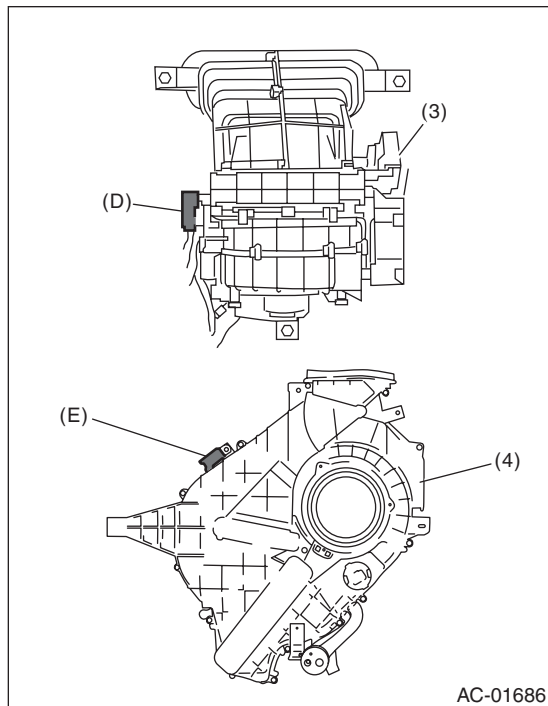


- (3) Blower motor unit
- (4) Rear cooler unit

|                    |     |
|--------------------|-----|
| Main fan relay 1   | (A) |
| A/C relay          | (B) |
| A/C fuse           | (C) |
| Front blower relay | (D) |
| Rear blower relay  | (E) |

### B: INSPECTION

- A/C relay

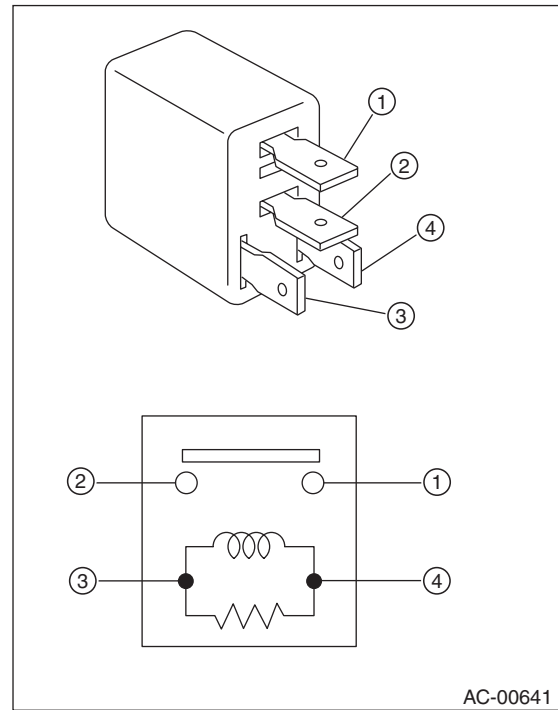


- (3) — (4): Continuity exists
- (1) — (2): Continuity does not exist

## Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- Main fan relay 1, Front blower relay

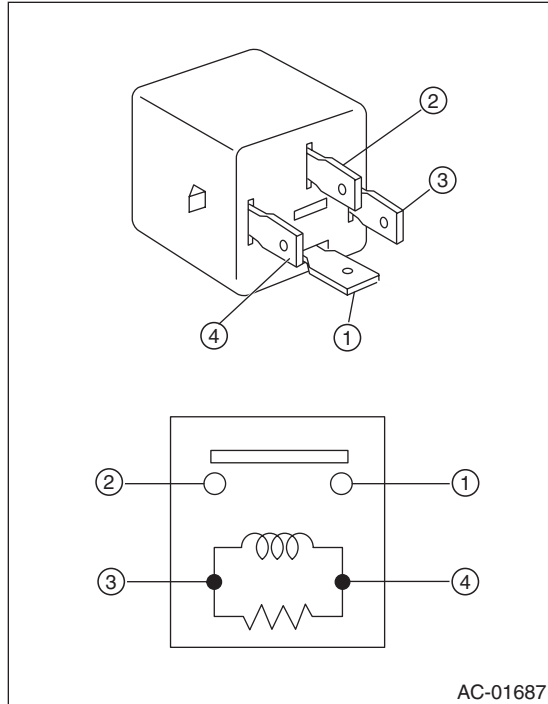


(3) — (4): Continuity exists

(1) — (2): Continuity does not exist

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new part.

- Rear blower relay

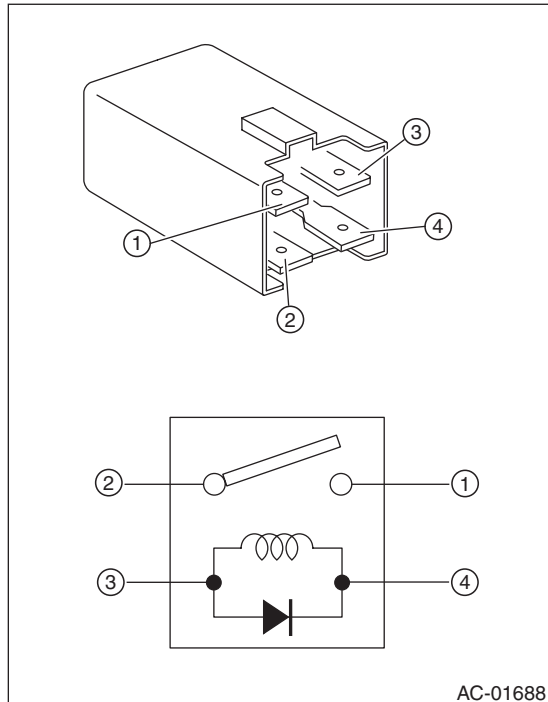

(3) — (4): Continuity exists

(1) — (2): Continuity does not exist