


26. Heater Duct

A: REMOVAL


1. FRONT HEATER DUCT

- 1) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the catch and detach the front heater duct (A).

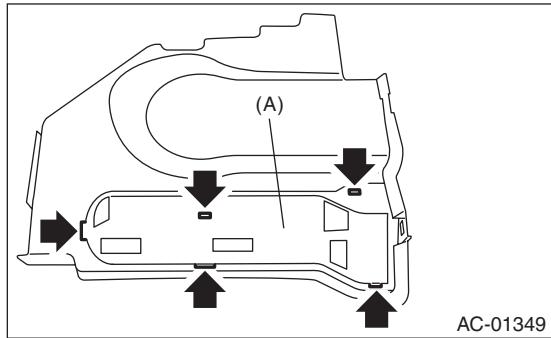

2. REAR HEATER DUCT

- 1) Remove the heater cooling unit. <Ref. to AC-37, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 3) Remove the front side sill cover.
- 4) Pull off the floor mat to remove the rear center heater duct (A) and rear heater duct LH, RH (B).

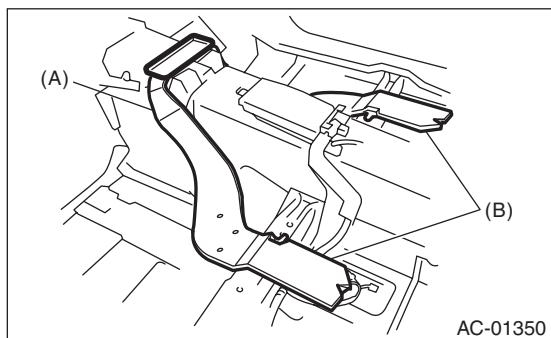

B: INSTALLATION

Install in the reverse order of removal.